

Quick Reference Guide

PLEASE READ THE Operating Instructions for details.


Keep this leaflet for your guidance.

Check the accessories:


- | | |
|--|--|
| <input type="checkbox"/> AC Adaptor one | <input type="checkbox"/> Incoming Message Tape (MC-30) one |
| <input type="checkbox"/> Greeting Message Tape (MC-10) one | |

How to Set Up the Unit


- 1** Insert the tapes before plugging in the AC adaptor.

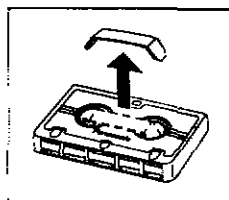

Remove the stopper.

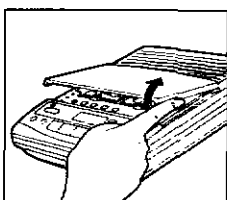


Open the lid.

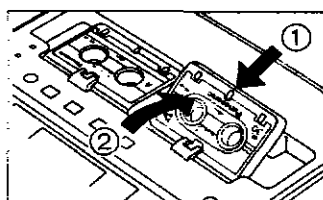


Insert the tapes with the full reel of each tape to the left.
Greeting tape → left side
Incoming tape → right side


- 2** Connect the unit as shown.

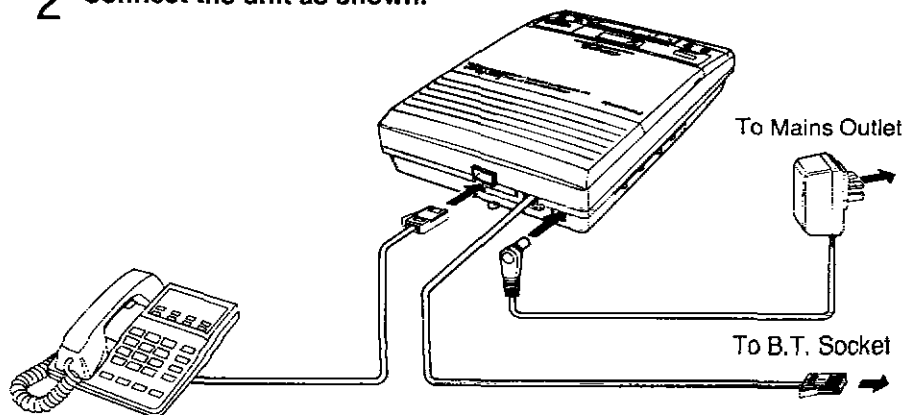


How to Operate the Unit

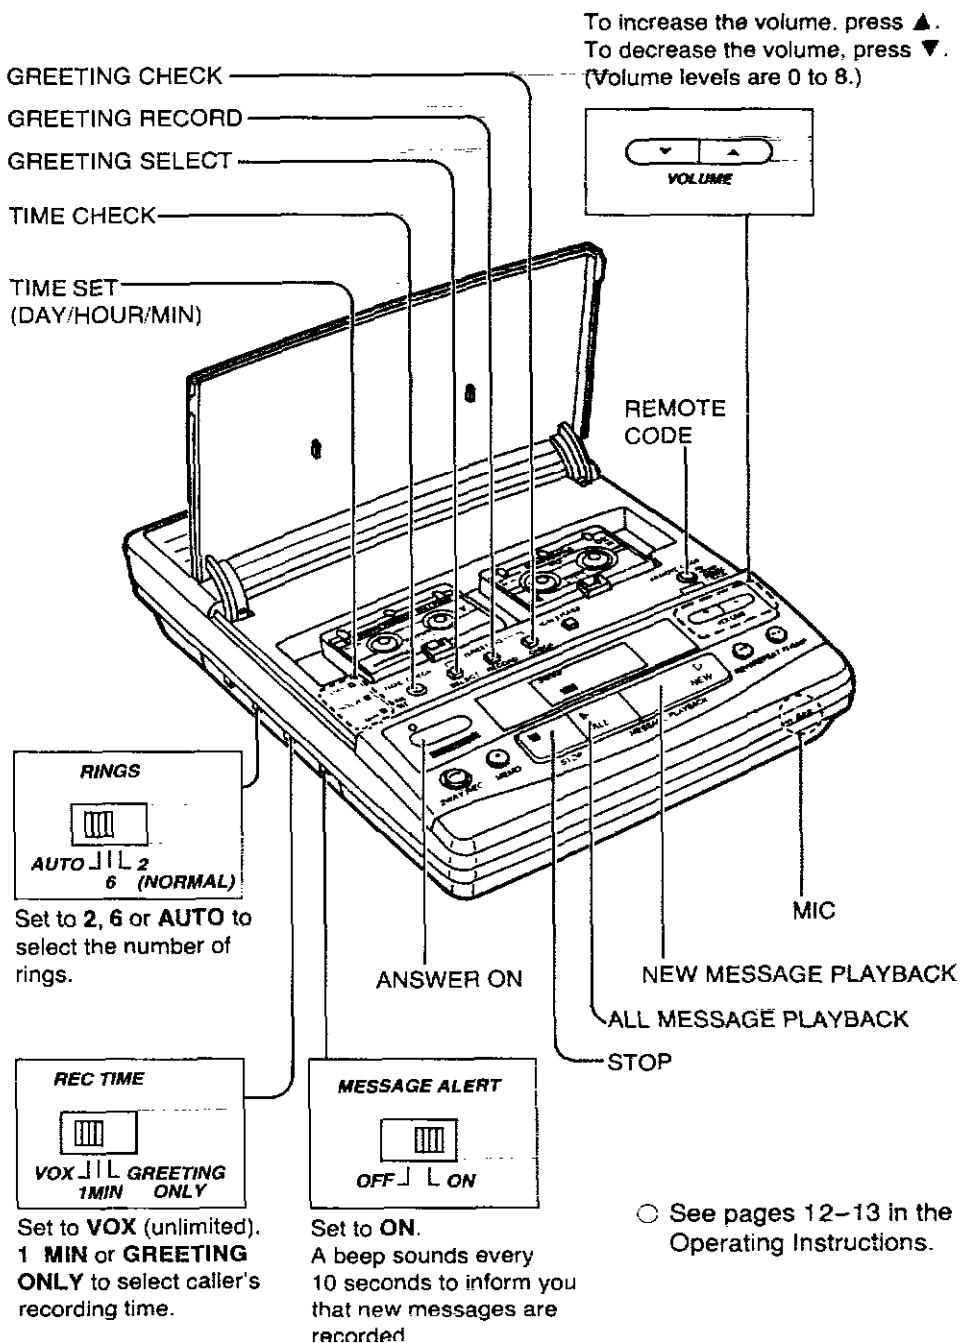


Time and day adjustment

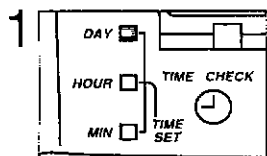

Press **DAY**.

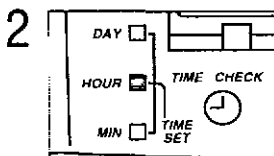

Press **HOUR**.

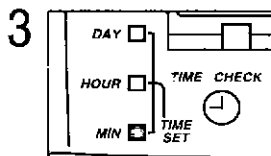


Press **MIN**.


—To check the time and day, press **TIME CHECK**.

Recording a greeting message (1 or 2)


- Do not pause for over 5 seconds while recording. If 6 beeps sound and “Record greeting again.” is announced, start again from step 2 after the unit stops resetting the greeting message tape.
- **First greeting message:** This is a short message, you can record up to 30 seconds.
Second greeting message: This is an extended message, you can record up to 2 minutes 45 seconds.

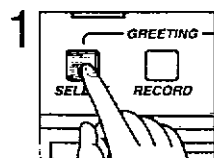


Press **GREETING SELECT** to select the first or second greeting message.

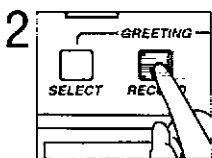

Press **GREETING RECORD** then release it.

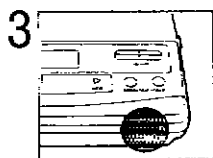


After a long beep, speak into the **MIC** (microphone).

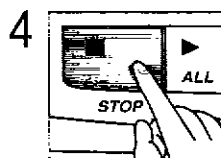

Press **STOP** to finish recording.

—To check the greeting message, press **GREETING CHECK**.

Automatic answering operation

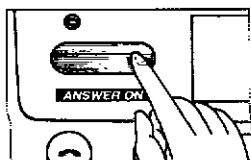

Press **ANSWER ON** to turn the answering system on.

—To reset the incoming message tape, press **REW/REPEAT**.


—The **ANSWER ON** indicator lights, and the unit is now ready to answer the calls.

Listening to messages



Press **NEW MESSAGE PLAYBACK** to play back only new messages.


OR

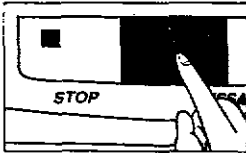

Press **ALL MESSAGE PLAYBACK** to play back all the messages.


- Press **REW/REPEAT** to resume playback at the beginning of the message.
- Press **FF/SKIP** to start the next message.

Erasing the recorded messages

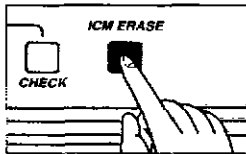


After playback, press **ICM ERASE**.

Setting the remote code number

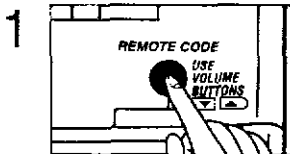

Press **REMOTE CODE**.

- The display shows the current remote code number.

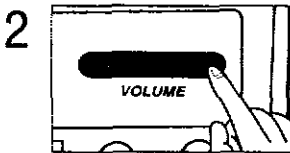

Within 7 seconds of pressing **REMOTE CODE**, press **VOLUME** (**▲** or **▼**) repeatedly to select a 2-digit number (00 to 99).

- Wait for 7 seconds after selecting the number. The number on the display will be stored.
- To check the remote code number, press **REMOTE CODE**.

○ For remote operation, see pages 32–42 in the Operating Instructions.