 


Presentation of the telephone

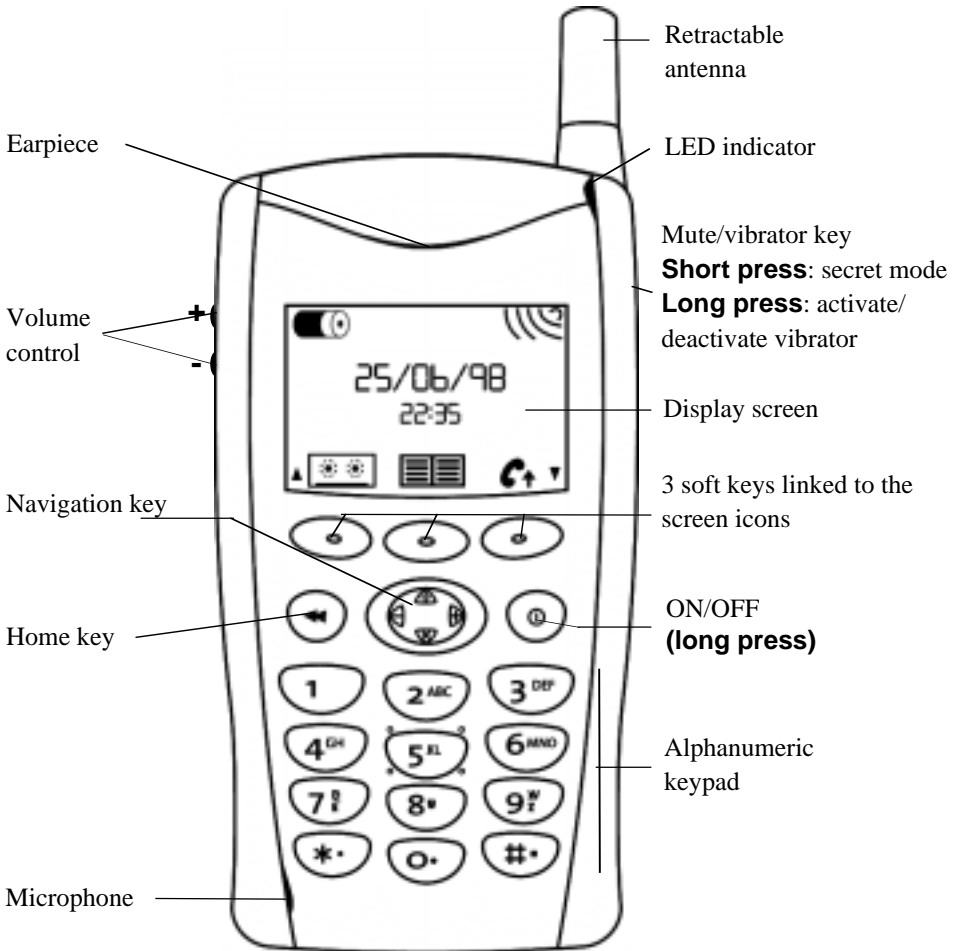


The home key allows you to return to the standby screen at any time.



A **long keypress** on the Home key activates the keypad lock. To deactivate the lock, type 159.

Volume control key - : a **short keypress** from the standby screen allows you to display your personal information.

This telephone is fitted with a vibrator, which alerts you discreetly of an incoming call. To activate the vibrate alert, turn off the ring tone with a long press on the vibrator key. When the vibrator is activated the  icon is displayed.

Contents

SAFETY PRECAUTIONS AND CONDITIONS OF USE	2	CALCULATOR	17
Conditions of use	2	MENU	17
Safety lock	2	Services	19
Environment	2	Cost	22
Safety precautions related to vehicle use	2	To personalize	23
		Vehicle option	24
		Security	25
INSTALLATION	3	ACCESSORIES	27
Inserting the SIM card	3	Battery and charger	27
Connecting and removing the battery	3	Fax/Data transmission	27
Charging the battery	4		
Switching on	4	LIST OF ICONS	28
Using dry cells	5	Status icons	28
LED indicator	5	Navigation icons	28
		Dialogue icons	28
CALLS	6	WHAT TO DO IN CASE OF PROBLEMS	30
Making a call	6	PIN code and PIN2 code are refused	30
Making an international call	6	To unlock PIN/PIN2 code:	
Making an emergency call	6	PUK1/PUK2 code	30
Rapid dial	6		
Receiving a call	7		
Call memory	7		
Vibrator	7		
Functions available when in communication	8		
Mute key	8		
Handling two calls simultaneously	9		
CALL FORWARDING KEY	10		
To activate	10		
To cancel	10		
DIRECTORIES	11		
Creating a memory location	11		
Searching a memory location	13		
Managing the memory locations	13		
RING TONE	13		
APPOINTMENT	14		
VOICE MAIL	14		
SHORT MESSAGE SERVICE	15		
Reading received messages	15		
Sending messages	16		

Safety precautions and conditions of use

We recommend that you read this chapter carefully before use.

As with all types of radio transceivers, your mobile phone emits electromagnetic waves. This telephone conforms to international regulations insofar as it is used under normal conditions and in accordance with the following.

The manufacturer disclaims any liability for damage which may result as a consequence of improper use or use contrary to the instructions contained herein.

CONDITIONS OF USE

- The retractable antenna must be fully extended. Avoid prolonged contact between the antenna and your skin when the telephone is switched on.
- Do not switch on your telephone on board an aircraft. Current legislation forbids this use and can lead to legal proceedings against the user.
- Do not switch on your telephone in a hospital, except in areas specified.
- Use of the telephone may affect the performance of medical electronic devices (pacemakers, hearing aids, insulin pumps, etc). When the telephone is on, it should not be close to the medical device or in the medical device area. In particular, when you answer the call, make sure to bring the telephone to the ear that is opposite to the side carrying the pacemaker or to the ear not wearing the hearing aid.
- Do not switch on your telephone near gas, or inflammable substances.
- Strictly respect the rules relative to the use of radiotelephones at petrol stations, chemical industry plants and at all sites presenting a risk of explosion.
- Do not allow children to use your radiotelephone without supervision.
- Do not open or attempt to repair your radiotelephone yourself.
- Please use your telephone only with batteries, chargers and accessories recommended by the manufacturer. The manufacturer disclaims any liability for damage caused by the use of other chargers or batteries.
- Before removing the battery from the telephone, please make sure that the telephone has been switched off.

SAFETY LOCK

- You may prevent use of your telephone if it is stolen, by activating the product code (page 25).

ENVIRONMENT

 
- Do not expose your telephone to unfavourable environmental conditions (rain, dust, sea air, etc.).
- Outside the manufacturer's recommended operating temperature range (-20 ° C to + 55 ° C), the legibility of the display may be impaired, but this is temporary and not serious.
- Do not attempt to open the battery that contains heavy metal. Do not throw a used battery in the household rubbish. Discard your used battery in compliance with local environmental legislation.

SAFETY PRECAUTIONS RELATED TO VEHICLE USE

- It is the user's responsibility to verify if the local laws permit the use of a mobile phone in a vehicle.
- In case of use in a vehicle, and to reduce the effect of electromagnetic waves and interference with the vehicle electronics, the telephone should be connected to an external antenna as soon as it is switched on. This antenna should be mounted and located away from passengers or separated from them by a metal screen (the car roof, for example).
- For maximum safety, use your telephone in a vehicle at stop. If you have to telephone while you are driving, the use of the handsfree mode is highly recommended (see Accessories leaflet).
- Use of the telephone may interfere with the vehicle's electronic system such as the ABS anti-lock brakes, or the air-bag. To ensure that there is no problem, please check with your dealer or car manufacturer before connecting your telephone and, in any case do not leave the telephone switched on over the control panel.

Installation

INSERTING THE SIM CARD

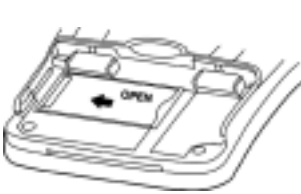


Open

Unlock and lift the flap



 Insert the card into the flap

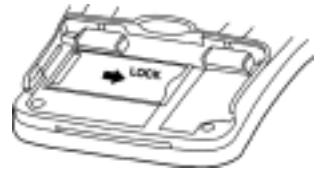

Close

 
Close and lock the flap

IMPORTANT: To remove SIM card:

1. switch the telephone off,
2. remove the battery.

Keep your SIM card in a safe place when not using your telephone and do not leave your confidential code (PIN) near the unit.


CONNECTING AND REMOVING THE BATTERY

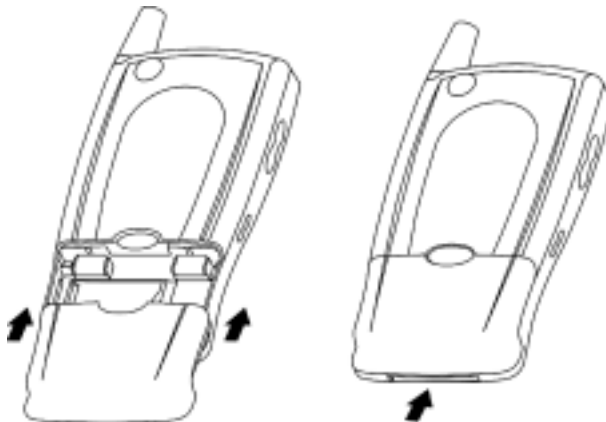

Installation


CHARGING THE BATTERY

 Charging in progress

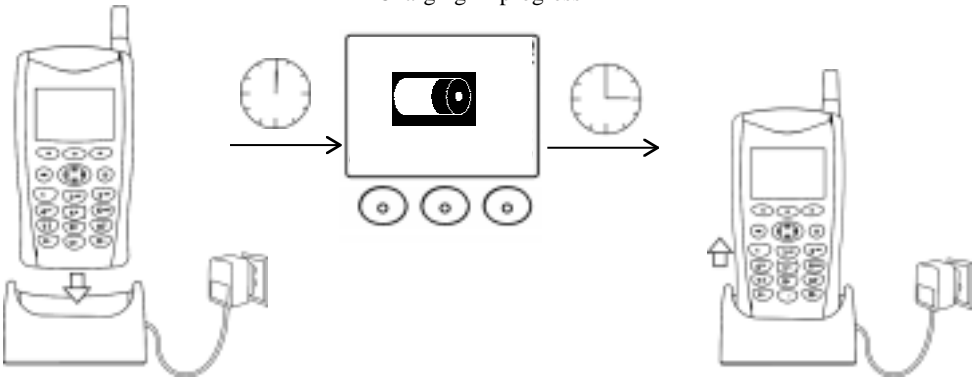

Charging is possible with the telephone ON or OFF. Charging time is approximately 3 hours¹. If your telephone has not been used for some time, be sure to recharge the battery before use. The socket outlet must be nearby and easily accessible. If you are using a new (or very discharged) battery, the battery charging icon may take a few minutes to appear. Avoid leaving your telephone without a battery connected to it. The telephone is fully charged when the icon is full and steady. This telephone is equipped with an internal storage battery (it cannot be reached) which allows you to save stored information (directories, personalized data), we thus recommend that you leave a charged battery in your telephone at all times.

 SWITCHING ON

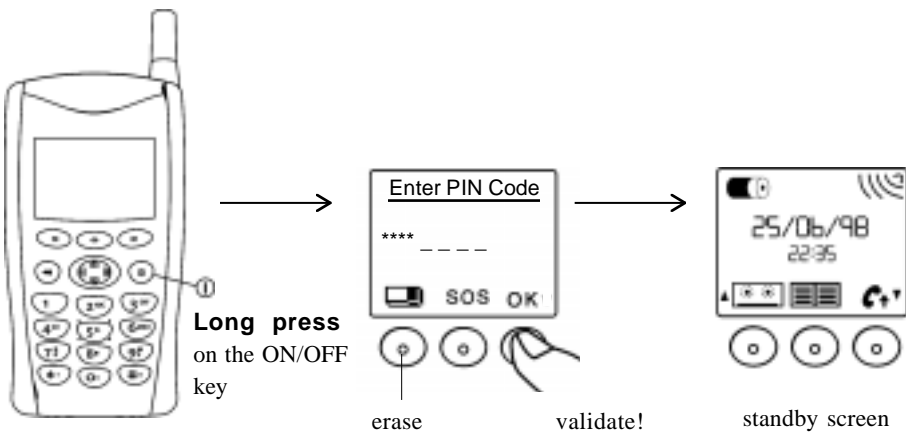

Long press
on the ON/OFF
key

erase

validate!

standby screen

¹ Information not contractual.

 
Installation

USING DRY CELLS (optional with specific compartment)

Fitting the dry cells



Remove the dry cells compartment

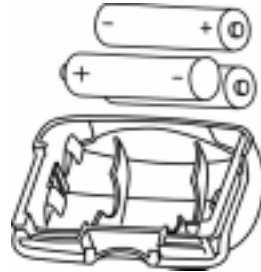

Turn it over and insert the dry cells
(LR3 or AAA type)

Dry cells polarity is marked on the
compartment bottom

LED INDICATOR

Green slow blinking:

- **Network presence:** You can make and receive calls.

Green rapid blinking:

- **Receiving a call**
- **Receiving a message:** may be interrupted by pressing  or by receiving a call.

Red blinking:

 
- **Battery low:** Repeated as long as the battery is low.



Calls


So as to improve communication quality, it is recommended that the antenna should be fully extended.

MAKING A CALL

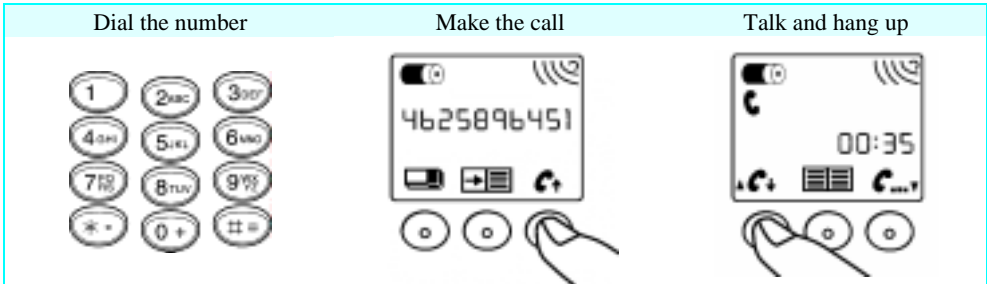

MAKING AN INTERNATIONAL CALL

 Access the international prefix "+" with a long keypress

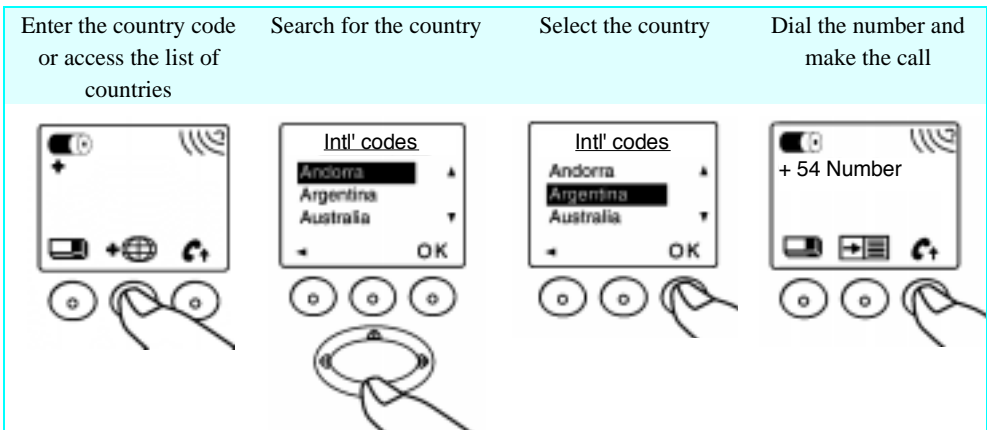

MAKING AN EMERGENCY CALL

112

If service is available with network, even if you have not inserted the SIM card



RAPID DIAL

Rapid dial to one of the first 9 numbers stored in the SIM directory

 
Dial a number (1 to 9)






RECEIVING A CALL

When a call is being received, the phone rings and the green LED indicator flashes rapidly.

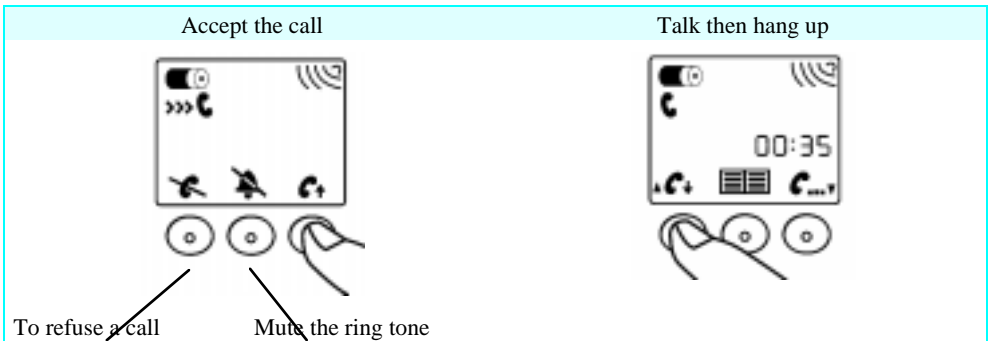

CALL MEMORY

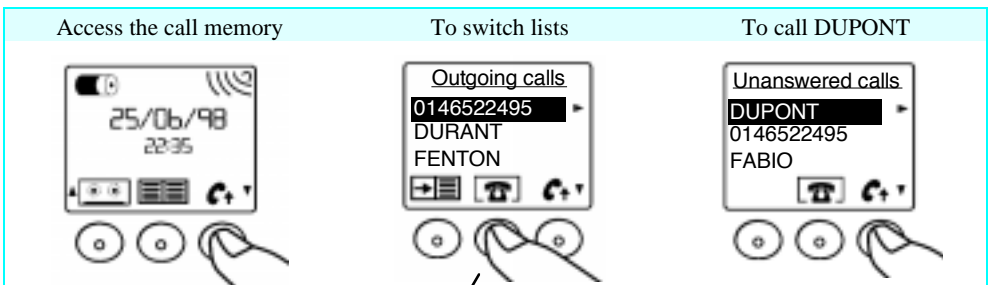 

Press once to access incoming calls unanswered, twice to access incoming calls answered²

VIBRATOR

This telephone is fitted with a vibrator, which alerts you discreetly of an incoming call. To activate the vibrator alert, turn off the ring tone with a long keypress on the vibrator key. The icon indicates the muting of the ring tone and activation of the vibrator. A second long keypress activates the ring tone and deactivates the vibrator.

² Caller's number is displayed, depending on the network (see Menu/Services/Caller ID?).



Calls

FUNCTIONS AVAILABLE WHEN IN COMMUNICATION

Adjusting earpiece volume

Use the side + and — volume adjustment controls.

Access to directories

 

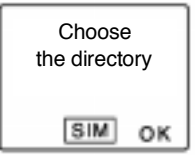 





Access to Short Message Service





Scratchpad memory

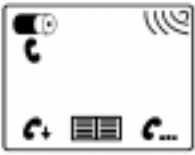 If you are in communication, someone may give you a number you wish to save. Enter this number and save it in the directory of your choice.

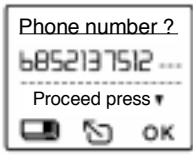
You are in communication	Enter the number	Select the directory	Confirm the number
 <p data-bbox="210 885 386 909">Delete a character</p>		 <p data-bbox="535 849 789 906">Press once to access  or twice to access .</p>	

 Putting a call on Hold

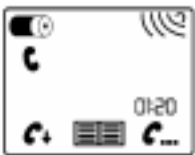To put on hold	To communicate again
	

MUTE KEY

If you do not wish to be heard by your correspondent, enter mute mode with a **short keypress** on the mute key (see page I).

When you press this key, the  icon is displayed on the screen to remind you that you are in the mute mode. Do not forget to press the key again to cancel the mute mode!

HANDLING TWO CALLS SIMULTANEOUSLY³

Your telephone can simultaneously handle two calls: you can put one correspondent on hold to answer or make a second call and then switch between correspondents.

Receiving a second call

<p>To take the new call and put the current call on hold</p>	<p>To switch from one correspondent to another</p>
<p>To refuse a call and stay on line with your first correspondent</p>	<p>To take the call and end the call with your current correspondent</p>


Making a second call

<p>You are communicating</p>	<p>Dial the number of your second correspondent</p>	<p>To make your second call. Current call is automatically put on hold</p>	<p>To switch from one correspondent to another</p>
		<p>Delete a character</p>	


³ If the Call waiting service is not activated automatically by the operator, and if you have a subscription, you can activate it with .




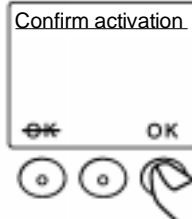 



Call forwarding key


The call forwarding key  allows you, by simply pressing a button, to activate or deactivate the type of call forwarding you have programmed with **MENU 1 2**. For example, you may activate an all calls forwarding to your secretary's number when you are at a meeting.




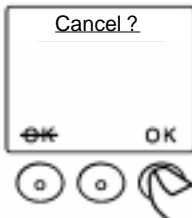 

TO ACTIVATE

Access the second string of icons with the  navigation key.

Press the Call forwarding key	Dial the number to which forwarding is required, and confirm	Reconfirm	You have now forwarded all incoming calls. The  icon will appear on the screen
			

TO CANCEL

Access the second string of icons with the  navigation key.

Press the Call forwarding key	Access the programmed call forwarding number	Cancel	Incoming call forwarding is deactivated, but number is retained in the phone's memory. The  icon will disappear
			

Directories



Three directories are available for storing telephone numbers:

- the SIM card directory
- two directories in the phone



The telephone contains two directories with space for 50 memory locations each, it can also handle up to 250 more memory locations on the SIM card (depending on type of card). Each directory consists of memory locations so that you can store your correspondent's telephone number, name, address (directories 1 and 2) and memory location number (for rapid access).

CREATING A MEMORY LOCATION

We recommend that you store your numbers in international format ("+" followed by the country code) so that you can still make calls from the directory when you are abroad.

Example: creating a memory location in directory 1.

We suggest that you create a memory location in which you will store: the telephone number (6852137512), the name (MARTIN), the address (Paris), the memory location number (1).

Access the directories	You are now in the SIM directory	You are now in directory 1, create a memory location:	Enter the number and Proceed with ▼ to enter the name
	<p>Press once to access , twice to access .</p>		

Access to letters is performed via successive keypresses on selected keys until the required letter appears (see table on next page).

To delete a character



To exit a directory without modification



To type a space





Directories

Enter the name and
Proceed with to
enter the address

Type in
the address and
Proceed with to
enter the memory
location number

An available memory
location number is
offered to you
automatically.

Confirm the storing of
the memory location
in
directory 1.

Name?

MARTIN

Proceed press



Address ?

PARIS



Memory location?

1

1-50



MARTIN

68 521 37 512

1



You can add a DTMF sequence to the phone number (sequence of digits added to the phone number so that the consultation of an answering machine or a voice mail, etc., is automatic) by entering a "P" pause before the number, via a long keypress on .

Key	Number of keypresses							
	1	2	3	4	5	6	7	8
	1	SP ¹	,	:	@	'	"	;
	2	A	B	C	Å	Ä	Æ	Ç
	3	D	E	F	É			
	4	G	H	I				
	5	J	K	L				
	6	M	N	O	Ñ	Ö	ø	
	7	P	Q	R	S	ß		
	8	T	U	V	Ü			
	9	W	X	Y	Z			
	0	+	-	/	%	£	\$	¥
	*	. ²	?	¿	!	¡	&	§
	#	=	()	<	>	_	

¹ SP: "space" character

² .: character required to key in decimals



SEARCHING A MEMORY LOCATION

In the directory you can search for a name by entering the first letter:

You are looking for Martin

press for the letter M

Find a memory location from a memory location number

From the standby screen, key in the memory location number:

 
Enter LOCATION No. Press

MANAGING THE MEMORY LOCATIONS


Access the SIM directory



Access a memory location

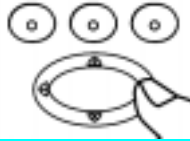

You now can:

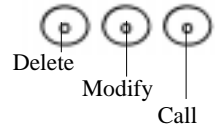 




Ring tone



Access Menu Ring tone to adjust the volume and melodies.



   You can select a specific melody for each directory

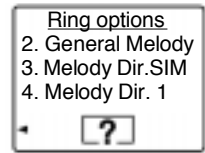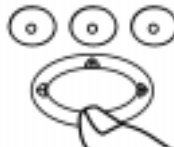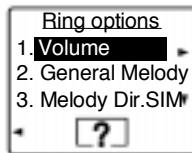



Appointment

Access the Appointment




Enter date, time and subject.
Validate after each entry



To edit, modify or cancel
an appointment.



Cancel Modify

If you do not wish to cancel nor modify the appointment, go back to the standby screen via .



Voice mail

This is for voice mail systems provided by networks⁴. They work similar to answering machines and can be checked at any time. This means that you do not miss any calls.

Calling your voice mail



To personalize your voice mail, store the telephone number of your mail system (this number will have been issued to you by your operator).

Access the voice mail



Store the voice mail
number



Call the voice mail
number for the first
time to personalize
your recorded message
and to activate the
function



Listen to the messages
left
by your
correspondents



If you wish to change the voice mail telephone number, use    .

⁴ Check the availability of this service with your operator.





The operator's⁵ Short Message Service allows you to receive full text messages of up to 160 characters.

You can also send short messages to another GSM⁵ telephone, or to a FAX⁵ machine, or to other dedicated servers.


READING RECEIVED MESSAGES




You have just received a message


You are notified by a beep, a green flashing LED, and the  icon on the screen.

Access the second string of icons with the  navigation key.

Access the list of received messages	Access the contents of the highlighted received message:	Read the message

The  sign indicates unread messages. Date and time of receipt of message are also given by the operator.

The   sign on either side of the number indicates that the number may be directly called via .

The received messages are stored in the SIM card. The SIM card has a limited capacity that can become full. In this case, the  icon will appear on the screen. Once you have read a message, it is best to delete it.

⁵ Check the availability of this service with your operator.



Short Message Service

SENDING MESSAGES

Access the second string of icons with the navigation key.

Access message system	You are in the list of received messages. Access the list of sent messages:	You are in the list of sent messages. Create a new message:	Enter the message and confirm it

Entering parameters

- 1 **Rcpt.** (destination number). ✓ OK
- 2 **S.CTR.** (service centre number) contact operator/service provider ✓ OK
- 3 **Type** of message GSM by default, or FAX, or other dedicated servers ✓ OK
- 4 **Dura.** (duration of validity⁶ unlimited by default (0) or between 1 and 99 hours). ✓ OK

Storing a completed message

✓

A typed message can be stored for sending or editing at some later date.

Sending a message

✓

Asking for receipt acknowledgement (AR)

✓

Having entered these parameters, you will be able to find out if the message is received.

The icon (acknowledgement request) will then be displayed in front of the message.

The icon (acknowledgement receipt) will be displayed in front of the relevant message when your correspondent has received the message.

The **X** icon (transmission problem) will be displayed in front of the relevant message if the network was not able to deliver the message.

⁶ Duration available will depend on network characteristics.

Calculator



CALCULATOR



The telephone will allow you to perform the four basic operations: +, -, ÷, x which are accessed from the navigation key; the decimal point can be accessed with the key and the result = is accessed with the key.

Clearing the previous calculation



To exit the calculator function, press the key.

Menu



Access the second string of icons with the navigation key.

Access the menu	Navigate between the menu lists
	<p>Scroll</p> <p>Return to the previous screen</p> <p>Help message</p> <p>Access the highlighted option</p>

You can also directly access the functions from the keypad:

Example: from the menu screen, the sequence of keys: brings you directly to the " To personalize/Personal Info./Your phone no." Menu.

The table on the following page gives you a list of menus that can be accessed by the user with the direct access numbers.

Direct access keys	Menus
	and options

Direct access keys	Menus
	and options

1	Services
1	Call forward.
2	Call forw. key
3	Call barring
4	Autorize
5	Networks
6	Conceal ID.
7	Caller ID?
8	Call waiting

4	Vehicle option
1	Any key answer
2	Auto answer
3	Car Radio mute
4	Phone alarm



2	Cost
1	Cumulated cost
2	Reset to 0
3	Last call
4	Display credit
5	Set credit
6	Durat.reminder
7	Cost reminder
8	Unit& currency

5	Security
1	PIN Code
2	Product Code
3	Menu lock code
4	PIN2 Code
5	Erase memory



3	To personalize
1	Personal Info.
2	Set audio opts
3	Backlighting
4	Constrast
5	Time and date
6	Language
7	Auto power off



Crossed out functions require a special subscription.

SERVICES




This option allows you to access the different services offered by the network.

Call forward.



Call forwarding is a service enabling you to redirect calls to another number, for example to your voice mail (this service can only be accessed within the GSM coverage zone).

When one or more call forwarding options are active the status icon  is displayed.

- **Activate** (*forwarding*)



You can programme different kinds of forwarding: Voice, Fax, Data, All services.

- **All inc. calls:** all calls received are forwarded.
- **If line busy:** only calls received when you are in communication are forwarded.
- **If no reply:** only calls not answered after four rings are forwarded.
- **If not reach.:** calls are forwarded if you are not connected to the network.
- **Conditional:** calls received if you are not connected to the network, if line is busy and if there is no reply.

- **Cancel** (*one call forwarding*)



- **Cancel all** (*all forwarding types*)




- **Inquire** (*your network*)



This function allows you to check the current selection of call forwarding.

IMPORTANT

If you have changed the programming of call forwarding on your SIM card with another telephone, we recommend that you interrogate your network to update the  status icon.

Call forw. key



(programming Call forwarding key, see page 10).

Forwarding of all incoming calls has priority over the other forwarding types, activating or deactivating it does not cancel the forwarding programmed in the Call forwarding Menu.

- **All inc. calls**




(*type of default call forwarding*):
all incoming calls are forwarded.

- **Conditional**



Calls received are forwarded when there is no answer, when busy and when outside the network.

Call barring⁷

You can prevent the making or receipt of certain calls. This service is password protected. The  icon shows the barring status. However, emergency calls are never barred.

N.B.: If you have changed the programming of call barring on your SIM card from another phone, we advise you to interrogate your network.

- Activate (*call barring*)

The types of call barring you can activate are the following:

- **Inc. if abroad:** if you are on a network which is different from your subscriber network (abroad) you cannot receive calls.
- **All inc. calls:** no incoming calls can be received.
- **Intl exc →home:** no calls abroad except to the subscriber network.
- **International:** barring all calls to international numbers.
- **Outgoing calls:** barring all outgoing calls.

- Cancel (*one single barring*)**- Cancel all**

To cancel all call barring.

- Inquire (*your network*)

This function enables you to check the status of activation or deactivation of the various types of barring you have programmed.

- Password (*network*)

To change the password given to you at the time of subscription.

Authorize (*call*)**- Outgoing calls**

This function allows you to limit the calls you make to a list of numbers of your choice.

- Incoming calls⁸

This function allows you to limit the calls you receive to a list of numbers of your choice; for example by filtering incoming calls.

You can create a list of incoming and outgoing calls:

1 By prefix

You can enter prefixes or complete numbers. Only those calls whose number has one of these prefixes will be authorized.

2 By directory⁹

You can choose to authorize calls for an entire directory or a combination of directories.

⁸ If the caller's number is not transmitted, the call will not be filtered.

⁹ The selected directories cannot be modified.

- **All calls** ✓ 3
To deactivate all filtering of incoming and outgoing calls.

- **Password (Authorize)** ✓ 4
To activate, deactivate or change the password which protects access to the "Authorize" function.

Networks ✓ 5

This service allows you to select the network and the telephone connecting mode.

- **Cell Broadcast**¹⁰ ✓ 1
To receive special messages from a network you are not connected to, you must first create a list of codes corresponding to the information you wish to receive (tariffs, weather, etc) and select a reception mode.

• **Reception mode** ✓ 1
(Restricted, Full reception, No reception)


• **CB code** ✓ 2

Display list ✓ 1


Add CB code ✓ 2

Dial the service call that was given to you by your operator ✓ OK

Suppress CB ✓ 3

and cancel message display, select the code you wish to suppress ✓ 

These messages are automatically displayed upon receipt in the standby screen.

Use the  navigation key to display information page by page.

- **Selection** ✓ 2

• **Selection mode** ✓ 1

Automatic ✓ 1

The telephone will always try to connect first to your subscribed network. If it does not find this, it will search for other GSM networks (depending on the networks available from the **preferred** list of known networks, and subject to agreements between operators).

Manual ✓ 2

In manual mode, you must select an available network.

Forced ✓ 3

 
The forced mode forces a network search from among the following:

Available net.: those of your radio environment.

Known networks: You can select a network from the list.

Type Ntwk code: you can enter the network using a 5 figure code¹¹ (the three country code figures followed by two network code figures).

10 Functions displayed if available.

11 See the List of Networks supplied by your operator  -

Note:

If you have selected the forced mode, the name of the network will appear highlighted on the standby screen.

• Preferred (List) ✓ ②

This is a list of networks (maximum 32) which you can compile from the available and/or known networks, or 5 figure network codes that you enter manually.

Add to the list ✓

• Forbidden ✓ ③

A network with a * sign is forbidden by your subscribed network. This option allows to cancel a forbidden network

Cancel ✓

Conceal ID. (CLIR)¹² ✓ ⑤

In order not to reveal your identity (telephone number) when calling a correspondent.

Caller ID ? (CLIP)¹² ✓ ⑦

This function allows you to see the telephone number of your correspondent (on screen) or the correspondent's name if already stored in your directories.

Call waiting¹² ✓ ⑧

This option warns you while in communication that another call is waiting (beep or displayed message). To switch between correspondents, see Calls/Putting a call on hold.

- **Activate** (call waiting) ✓ ①

- **Cancel** (call waiting) ✓ ②

- **Inquire** (your network) ✓ ③

COST ②

This option allows you to know the duration and the cost of your calls (if available).

Cumulated cost ✓ ①

(of outgoing calls)

Reset to 0 ✓ ②

(of duration of outgoing calls)

Last call ✓ ③

Display credit ✓ ④

Set credit¹³ ✓ ⑤

Durat.reminder¹⁴ ✓ ⑥

You can programme a periodic beep to help you estimate the timing of your calls. Enter an interval in minutes (up to 99) for the beeps to sound during a call.

¹³ You will also find this function in the Menu/Security/PIN2 Code.

¹⁴ Cannot be activated at the same time as the Cost reminder.

Cost reminder¹⁵

You can programme a periodic beep to help you estimate the cost of your calls. Enter the number of charge units (up to 99). When the number is reached, a beep sounds during the call.

Unit& currency¹⁶

You can set the telephone unit cost on your network in the currency of your choice including the currency name (as a default, enter "1", and communication cost will be calculated in units).

TO PERSONALIZE

This option allows you to enter some parameters to suit yourself (e.g. choice of language, contrast, etc.)

Personal Info.

This option allows you to store personal data. A short keypress on the **Volume -** key allows you, in Standby, to display them.

- Your message

Personalized message.

- Your phone no.

This option allows you to store your GSM number.

- Voice mail no.

You can store the number of your voice mail provided by your operator.

Set audio opts**- Key tone****- Message alert**

On receipt of a short message.

Backlighting

To save battery power, you can deactivate the backlighting and leave the screen and keypad permanently off.

Contrast

15 This function cannot be activated at the same time as the Duration reminder.

16 You will also find this function in the Menu/Security/PIN2 Code

Time and Date

The telephone displays the date and time on the standby screen.

- **To set**



- **Display format**

**Language**

A list of languages is offered. The "automatic" choice will be the language of your subscription network.

Auto power off

This function allows automatic power off on the telephone when the telephone is not used for long periods of time (i.e. no keypress or no incoming call or message). This function can be programmed (up to 12 hours of non-use) in steps of one hour.

VEHICLE OPTION

This option allows you to select user options for the telephone when connected to a vehicle hands-free kit.

Any key answer

This function allows you to answer a call by pressing any key.

Auto answer

The call is answered automatically after several seconds.

Car Radio mute¹⁷

The car radio is automatically switched off when a call occurs. It will automatically come on again after the call.

Phone alarm

When you switch off the ignition and leave the telephone in the vehicle, an audible beep will sound.

¹⁷ If available with the vehicle hands-free kit. Check with your installer.

SECURITY



This option protects use of the telephone's SIM card and bars access to certain functions.

PIN Code



(Access code for the SIM card)

- **Activ/deactiv**



- **To change code**



You must first enter the old PIN code then enter the new PIN code (4 to 8 figures) and confirm by entering the new one again.

Product code



This is the telephone's "anti-theft" device. It protects access to the telephone when it is powered up. If you use this protection, every time you power up the phone, you need to enter this code after entering the PIN code. **If the product code is identical to the PIN code, you need only enter it once.**

- **Activ/deactiv**



- **Change code** (4 to 8 digits)



Important!

Make a note of the new code. If you lose it, check with your supplier.

Menu lock code



This protects access to certain "personal" telephone functions.

If the function is activated, the code will be requested for access to the following functions:

	Directory function
	Cost/Reset to 0
	Cost/Unit& currency
	Cost/Set Credit
	Services
	Security

Entering the code once gives access to all the other protected functions.

- **Activ/deactiv**



- **Change code** (4 to 8 digits)



PIN2 Code¹⁸



A PIN2 code is issued when you take out your subscription, however, this code can be changed.

It protects access to certain functions of the telephone (depending on type of subscription). You must first enter this code to access the following functions:

- **To change code** (4 to 8 digits)



- **Call cost**



(Cumulated cost, Credit, Unit& currency)

¹⁸ If available on the SIM card.

- Fixed dir.

Enables calls to be restricted to certain numbers or prefixes as entered in a directory called Fixed directory. This directory, if available, is in your SIM card. You can add prefixes at the time you make a call (to limit calls to a specific geographical area, or to a company, etc.). However, emergency calls are always enabled.

• Activ/deactiv

Only numbers in the fixed directory can be called, all other outgoing calls are barred.

• To programme

See "Creating a memory location".

Erase memory

This function allows you to erase the lists of incoming/outgoing calls.

Accessories

BATTERY AND CHARGER

The telephone is supplied with a charger and an uncharged Lithium (Li-Ion) battery. A range of optional accessories complements the standard pack (see "Accessories" leaflet).

Conditions of use:

Temperature: good between 0° and 40°.

Network: depending on network coverage and parameters.

 
Your movements: the battery will discharge noticeably when you are travelling at speed (e.g. car or train), as your telephone will be constantly interacting with the network.

The battery contains heavy metal. Do not throw a used battery in the household waste. Discard your used battery in compliance with the local environmental legislation.







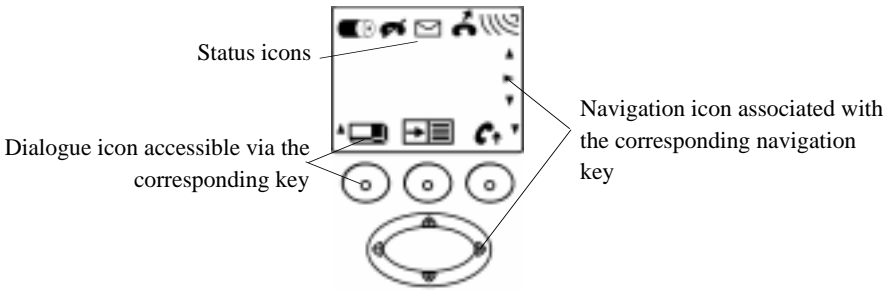





FAX/DATA TRANSMISSION

Your telephone allows you to send faxes and transfer data via specific accessories that are connected to the PC card port on your PC.




List of icons







STATUS ICONS

-  Battery charge.
-  Radio signal strength indicator (4 levels).
-  Short message received.
-  Voice mail message received.
-  Short message store full.
-  Unanswered call received.
-  Fax/Data link connected.
-  Call forwarding function activated.
-  Call barring function activated.
-  Vibrator activated.
-  Mute activated.
-  Ongoing call not encoded.

Types of calls








-  Voice.
-  Fax.
-  Data.

NAVIGATION ICONS

-  To move up.
-  To move down.
-  Move to the right or to the following display.
-  Move to the left or to the previous display screen.

DIALOGUE ICONS

Calls











-  Call emergency services.
-  Make or answer calls and consult the list of the last 10 dialled numbers.
-  List of outgoing calls, answered or not answered.
-  End a call.
-  Refuse a call.
-  Put a correspondent on hold.
-  Resume a call with a correspondent put on hold.

List of icons










DIALOGUE ICONS (continued)

-  Answer an incoming call by ending the ongoing conversation.
-  Answer an incoming call by putting the ongoing call on hold.
-  Switch from one correspondent to another.
-  Mute the ring tone of incoming calls without answering or refusing a call.
-  Choice of ringing volume and melody.
-  Programming an appointment.
-  Display list of international country codes.
-  Activate or deactivate programmed call forwarding.
-  Call voice mail.






Messages

-  Read received/sent short messages.
-  List of received messages.
-  List of sent short messages.
-  Store a message.
-  Send a message.
-  Create or modify a message.
-  Acknowledgement requested.
-  Acknowledgement received.
-  Transmission problem.
-  Message not read.



Directory

-  Access to the directories.
-  Select directory n°1.
-  Select directory n°2.
-  Select the SIM card directory.
-  Select fixed directory.
-  Create a new memory location in a directory.
-  Erase a character.
-  Modify a memory location in a directory, or modify a message.
-  Delete a memory location in a directory or delete a short message.

Menu

-  Access to menu.
-  Validate a choice.
-  Refuse a choice.
-  Quit the ongoing operation.
-  Help message.

Calculator

-  Access the calculator.
-  Clear the last calculation.

Unlock the SIM card

-  Enter your SIM card's unlock key.

Networks

-  Add networks.

PIN CODE AND PIN2 CODE ARE REFUSED

What to do in case of problems

Check that you have entered the correct code (a PIN code comprises 4 to 8 digits).

After three unsuccessful attempts, your SIM card will be locked.

TO UNLOCK PIN/PIN2 CODE: PUK1/PUK2 CODE

- **If the SIM card is blocked**, press the PUK icon then enter your PUK1 code (8 digits) given by the dealer.
- **If access to protected functions is prevented**, enter your unlocking PUK2 code (8 digits) that was given to you at the time of subscription.

If the attempt is successful:

- Enter the new PIN code, confirm and your telephone will be operational again.
- Enter the new PIN2 code and access to all the protected functions becomes possible.

If you fail to enter the unlocking code after 10 attempts, the card is definitively locked. Contact your dealer in this case.