

\* Some of the contents in this manual may differ from your phone, depending on the software installed or your service provider.



# DUAL BAND GPRS TELEPHONE SGH-C100



ELECTRONICS



Printed in Korea

Code No.: GH68-03852A

English. 05/2003. Rev. 1.0

World Wide Web

<http://www.samsungmobile.com>

# Contents

<b>Important Safety Precautions .....</b>	<b>7</b>
<b>Unpacking .....</b>	<b>9</b>
<b>Your Phone .....</b>	<b>10</b>
Phone Layout.....	10
Display .....	13
Service Light .....	15
<b>Getting Started .....</b>	<b>16</b>
Installing the SIM Card .....	16
Charging a Battery .....	18
Switching the Phone On/Off.....	20
Locking or Unlocking the Keypad.....	21
<b>Call Functions .....</b>	<b>22</b>
Making a Call.....	22
Adjusting the Volume .....	24
Answering a Call .....	25
Viewing Missed Calls.....	26
Switching Quickly to the Silent Mode.....	28
<b>Selecting Functions and Options .....</b>	<b>29</b>
<b>Phonebook .....</b>	<b>31</b>
Storing a Number with a Name .....	31
Using Phonebook Entry Options.....	34
Searching for and Dialling a Number in the Phonebook .....	35
Editing a Caller Group .....	37
Speed-Dialling .....	38
Deleting All Phonebook Entries.....	40
Checking the Memory Status .....	41

<b>Entering Text .....</b>	<b>42</b>	<b>Call Records .....</b>	<b>74</b>
Changing the Text Input Mode .....	43	Missed Calls ( <i>Menu 2.1</i> ) .....	74
Using the T9 Mode .....	44	Received Calls ( <i>Menu 2.2</i> ) .....	74
Using the Upper/Lower-Case		Dialled Calls ( <i>Menu 2.3</i> ) .....	75
Character Modes .....	46	Delete All ( <i>Menu 2.4</i> ) .....	75
Using the Symbol Mode .....	47	Call Time ( <i>Menu 2.5</i> ) .....	76
Using the Number Mode .....	47	Call Cost ( <i>Menu 2.6</i> ) .....	76
<b>Options During a Call .....</b>	<b>48</b>	<b>Sound Settings .....</b>	<b>78</b>
Putting a Call on Hold .....	48	Ring Tone ( <i>Menu 3.1</i> ) .....	78
Switching the Microphone Off (Mute) .....	49	Ring Volume ( <i>Menu 3.2</i> ) .....	78
Muting/Sending Key Tones .....	50	Alert Type ( <i>Menu 3.3</i> ) .....	79
Sending DTMF Tones .....	50	Keypad Tone ( <i>Menu 3.4</i> ) .....	79
Searching for a Number in the Phonebook ....	51	Message Tone ( <i>Menu 3.5</i> ) .....	80
Using the SMS Service .....	51	Power On/Off ( <i>Menu 3.6</i> ) .....	81
Answering a Second Call .....	52	Extra Tones ( <i>Menu 3.7</i> ) .....	82
Making a Multiparty Call .....	52	<b>Phone Settings .....</b>	<b>83</b>
<b>Using the Menus .....</b>	<b>55</b>	Infrared Activate ( <i>Menu 4.1</i> ) .....	83
Accessing Menu Functions by Scrolling .....	55	My Settings ( <i>Menu 4.2</i> ) .....	84
Accessing Menu Functions by Using Shortcuts	56	Greeting Message ( <i>Menu 4.3</i> ) .....	85
List of Menu Functions .....	56	Own Number ( <i>Menu 4.4</i> ) .....	86
<b>Messages .....</b>	<b>62</b>	Language ( <i>Menu 4.5</i> ) .....	86
Inbox ( <i>Menu 1.1</i> ) .....	62	Security ( <i>Menu 4.6</i> ) .....	86
Outbox ( <i>Menu 1.2</i> ) .....	63	Display Settings ( <i>Menu 4.7</i> ) .....	90
Write New ( <i>Menu 1.3</i> ) .....	65	Extra Settings ( <i>Menu 4.8</i> ) .....	91
Templates ( <i>Menu 1.4</i> ) .....	67	Short Cut ( <i>Menu 4.9</i> ) .....	92
Settings ( <i>Menu 1.5</i> ) .....	68	Reset Settings ( <i>Menu 4.10</i> ) .....	92
Delete All ( <i>Menu 1.6</i> ) .....	69	<b>Organiser .....</b>	<b>93</b>
My Objects ( <i>Menu 1.7</i> ) .....	70	Calendar ( <i>Menu 5.1</i> ) .....	93
Memory Status ( <i>Menu 1.8</i> ) .....	71	To Do List ( <i>Menu 5.2</i> ) .....	96
Voice Mail ( <i>Menu 1.9</i> ) .....	71	Time & Date ( <i>Menu 5.3</i> ) .....	99
Broadcast ( <i>Menu 1.10</i> ) .....	72	Alarm ( <i>Menu 5.4</i> ) .....	100
		Calculator ( <i>Menu 5.5</i> ) .....	101
		Currency Exchange ( <i>Menu 5.6</i> ) .....	102

<b>Network Services .....</b>	<b>103</b>
Call Diverting ( <i>Menu 6.1</i> ) .....	103
Call Barring ( <i>Menu 6.2</i> ) .....	105
Call Waiting ( <i>Menu 6.3</i> ) .....	107
Network Selection ( <i>Menu 6.4</i> ).....	108
Caller ID ( <i>Menu 6.5</i> ) .....	109
Closed User Group (CUG) ( <i>Menu 6.6</i> ) .....	109
<b>Fun Box.....</b>	<b>111</b>
Games ( <i>Menu 7.1</i> ) .....	111
WAP Browser ( <i>Menu 7.2</i> ) .....	112
Downloads ( <i>Menu 7.3</i> ).....	119
<b>Solving Problems .....</b>	<b>121</b>
<b>Access Codes .....</b>	<b>124</b>
Phone Password .....	124
PIN .....	125
PUK.....	125
PIN2.....	126
PUK2 .....	126
Barring Password .....	127
<b>Health and Safety Information .....</b>	<b>128</b>
Exposure to Radio-Frequency Energy (SAR Information) .....	128
Precautions When Using Batteries.....	130
Road Safety .....	132
Operating Environment .....	134
Electronic Devices .....	134
Potentially Explosive Atmospheres .....	136
Emergency Calls .....	137
Other Important Safety Information .....	138
Care and Maintenance .....	139
<b>Glossary .....</b>	<b>141</b>
<b>Index .....</b>	<b>145</b>
<b>Quick Reference Card .....</b>	<b>151</b>

# Important Safety Precautions

Read these guidelines before using your mobile phone. Failure to comply with them may be dangerous or illegal. For more detailed safety information, see "Health and Safety Information" on page 128.

## **Road Safety at All Times**

Do not use a hand-held phone while driving; park the vehicle first.

## **Switching Off When Refuelling**

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

## **Switching Off in Aircraft**

Mobile phones can cause interference. Using them in aircraft is both illegal and dangerous.

## **Switching Off in Hospitals**

Switch off your phone near medical equipment. Follow any rules or regulations in force.

## **Interference**

All mobile phones may be subject to interference, which may affect their performance.

## **Special Regulations**

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger (in a hospital for example).

### Radio Frequency Exposure

The design of this phone complies with European Union (EU) requirements relating to radio frequency (RF) exposure. To maintain compliance with these requirements, use only Samsung-supplied or approved accessories. Use of non-approved accessories may violate the requirements.

### Sensible Use

Use only in the normal position (held to the ear).

### Water Resistance

Your phone is not water-resistant. Keep it dry.

### Accessories and Batteries

Use only Samsung-approved accessories and batteries.

### Qualified Service

 
Only qualified service personnel may install or repair your phone.

# Unpacking

Your package contains the following items.




Handset



Travel Adapter



 Battery



User's Manual



Hand Strap

The items supplied with your phone may be different, depending on your country.

In addition, you can obtain the following accessories for your phone from your local Samsung dealer:

- Ear-microphone
- Simple hands-free kit
- Standard batteries
- Cigarette lighter adapter
- Car holder
- Data cable
- Battery charger

# Your Phone

## Phone Layout

The following illustration shows the main elements of your phone.



### Key Description



*In the menu facility*, scroll through the menu options and phonebook memory.  
*In idle mode*, allow you to access your favourite menu options directly (for more information on shortcuts, see page 92).



*In the menu facility*, return to the previous menu level and select the current menu respectively.  
*When entering text*, move the cursor left and right respectively.  
*In idle mode*, allow you to access your favourite menu options directly (for more information on shortcuts, see page 92).



Perform the functions indicated by the text above them (on the bottom line of the display).



*When entering text*, deletes characters from the display.  
*In the menu facility*, returns to the previous menu level.  
*In idle mode*, launches the WAP (Wireless Application Protocol) Browser directly.

**Key**    **Description** *(continued)*

Makes or answers a call.

*When held down in idle mode, recalls the last number dialled or received.*

*In the menu facility, selects a menu option or stores information that you have entered (such as a name) in the phone or SIM memory.*



Ends a call.

*When held down, switches the phone on and off.*

*In the menu facility, cancels your input and returns to the idle mode.*



*When held down in idle mode, accesses your voice mail.*



Enter numbers, letters and some special characters.



Enter special characters.



Perform various functions.



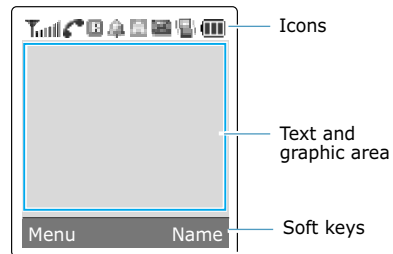
(on the side of the phone)  
During a call, adjust the earpiece volume.

*In idle mode, adjust the key volume.*

*In the menu facility, scroll through the menu options and phonebook memory.*

**Display****Display Layout**

The display comprises three areas.



Area	Description
First line	Displays various icons (see page 14).
Middle lines	Display messages, instructions and any information that you enter (number to be dialled, for example).
Last line	Shows the functions currently assigned to the two soft keys.

## Icons

### Icon Description



Shows the received signal strength. The greater the number of bars, the better the signal strength.



Appears when a call is in progress.



Appears when you are connected to the GPRS network.



Appears when the silent mode is active or you set the **Alert Type** menu option (**Menu 3.3**), so that the phone vibrates when you receive a call; for further details, see page 28 and page 79.



Appears when a new text message has been received.



Appears when a new voice mail message has been received.



Appears when you are entering text to indicate the current text input mode.



Appears when you set the alarm.



Shows the level of your battery. The more bars you see, the more power you have left.



Appears when the IrDA port is active. For details, see page 83.

### Icon Description (continued)



Appears when the mute mode is active.



Appears when you are out of your home area and have registered with a different network; for example, when travelling in other countries.



Appears when the keys are locked.

## Backlight

The display and keypad are illuminated by a backlight. When you press any key, the backlight turns on and remains on for a given period of time, depending on the **Back Light** menu option (**Menu 4.7.2**). Then it dims and finally switches to the digital clock, conserving your battery power.

To specify the length of time for which the backlight is active, set the **Back Light** menu option (**Menu 4.7.2**); see page 90 for further details.

## Service Light

The service light is top left on the phone. It flashes when services are available on the phone.

To activate or deactivate use of the service light, set the **Service Light** menu option (**Menu 4.7.3**); see page 90 for further details.


# Getting Started

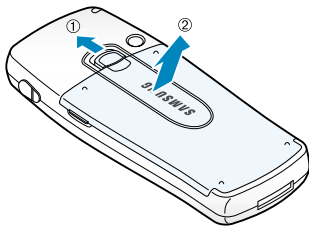
## Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and so on.


**Important!** The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card.

Keep all SIM cards out of the reach of small children.


1. If necessary, switch off the phone by holding down the  key until the power-off image is displayed.
2. Remove the battery. To do so:
  - ① Pull the battery catch on the back of the phone and hold it in that position.
  - ② Lift the battery away, as shown.



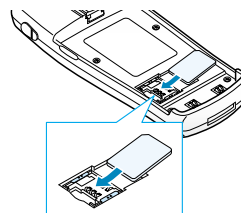
3. Slide the SIM card into the SIM card holder so that the holder locks the card in position. Make sure that the cut corner is top right and the gold contacts of the card face into the phone.



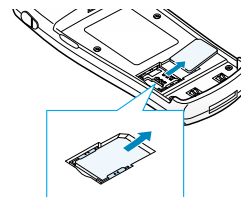
**Note:** When you need to remove the SIM card, slide it, as shown below, and take it out of the holder.



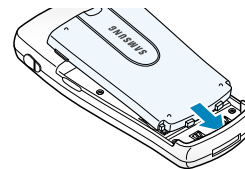4. Place the battery so that the tabs on the end align with the slot at the bottom of the phone.



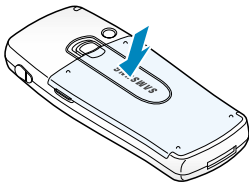- Push the battery down until it clicks into place. Make sure that the battery is properly installed before switching on the phone.




## Charging a Battery

Your phone is powered by a rechargeable Li-ion battery. A travel adapter is provided with your phone. Use only approved batteries and chargers. Ask your local Samsung dealer for further details.

The phone can be used while the battery is charging, but this will cause the battery to charge more slowly.

**Note:** You must fully charge the battery before using your phone for the first time. A discharged battery is fully recharged in approximately 200 minutes.

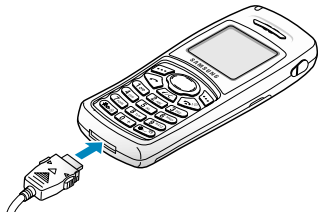- With the battery in position on the phone, connect the lead from the travel adapter to the bottom of the phone.



- Connect the adapter to a standard AC wall outlet.
- When charging is finished, disconnect the adapter from the power outlet and from the phone by pressing the gray tabs on both sides of the connector and pulling the connector out.




**Note:** Do not remove the battery from the phone while it is charging without first unplugging the adapter. If you do so, the phone may be damaged.

## Low Battery Indicator

When the battery is weak and only a few minutes of talk time remain, you will hear a warning tone and a message will be repeated at regular intervals on the display.

When the battery becomes too weak for the phone to operate, it switches off automatically.


## Switching the Phone On/Off


1. Hold down the  key until the phone switches on.
2. If the phone asks for a password, key in the password and press the **OK** soft key. The phone password is factory set to 00000000. For further details, see page 124.
3. If the phone asks for a PIN, key in the PIN and press the **OK** soft key. For further details, see page 125.

The phone searches for your network and when it finds it, the idle screen, illustrated below, appears. Now, you can make or receive a call.





**Note:** The display language is factory set to English. To change the language, use the **Language** menu option (**Menu 4.5**); for further details, refer to page 86.

4. When you wish to switch the phone off, hold down the  key until the power-off image is displayed.


**Note:** If you locked the keypad, you must unlock it before switching the phone off by pressing the **Unlock** soft key and the  key.



## Locking or Unlocking the Keypad

You can lock the keypad to avoid pressing keys by mistake.

Press and hold the  key in idle mode until the  icon and "Keypad Locked" appear on the display.

You can answer incoming calls using any keys, even if you lock the keypad. When you end the call, your phone returns to the key lock mode after the period of time specified in the **Auto Key Lock** menu option (**Menu 4.2.3**).


You can dial emergency calls even if you lock the keypad. Enter an emergency number. When the confirmation message appears, press the **Yes** soft key or the  key. When you end the call, your phone returns to the key lock mode after the period of time specified in the **Auto Key Lock** menu option (**Menu 4.2.3**).

To exit the key lock mode, press the **Unlock** soft key and then press the  key again. "Keypad Unlocked" appears and the  icon is no longer displayed.

You can also set the phone to automatically lock the keypad in the **Auto Key Lock** menu option (**Menu 4.2.3**). For further details, see page 85.



# Call Functions

## Making a Call



 
When the idle screen is displayed, key in the area code and phone number, and press the  key.

**Note:** If you have checked the **Auto Redial** option in the **Extra Settings** menu (**Menu 4.8**), the number is redialled automatically up to ten times when the person does not answer the call or is already on the phone; see page 91 for further details.


## Making an International Call

1. Press and hold down the  key. The + character appears.
2. Key in the country code, area code and phone number and press the  key.

## Correcting the Number

To clear...	Then...
The last digit displayed	Press the  key.
Any other digit in the number	Press the ( or ) key until the cursor is immediately to the right of the digit to be cleared. Press the  key. You can also insert a missing digit simply by pressing the appropriate key.
The whole display	Hold down the  key for more than one second.





## Ending a Call


When you have finished your call, briefly press the  key.

## Redialling the Last Number

The phone stores the numbers you dialled, received or missed if the callers are identified; see "Call Records" on page 74 for further details.

To recall any of these numbers, proceed as follows.

1. If you have typed any characters on the display, clear the display by holding down the  key for more than one second.
2. Press the  key to display a list of the last numbers in the order in which the calls were made.
3. Use the  and  keys to scroll through the numbers until the required number is highlighted.

To...	Then...
Dial the number highlighted	Press the  key.
Edit the number highlighted	Press the <b>Options</b> soft key, select the <b>Edit</b> option and change the number as required.
Delete the number highlighted	Press the <b>Options</b> soft key and select <b>Delete</b> .
Delete all numbers in the list	Press the <b>Options</b> soft key and select <b>Delete All</b> . For details, see page 75.

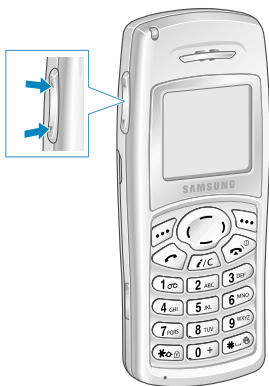
## Making a Call from the Phonebook

You can store frequently-dialled phone numbers with a name in the SIM card or the phone memory, using the phonebook. You then simply select the required name to recall the associated number. For further details on the Phonebook features, refer to page 31.

## Adjusting the Volume

During a call, if you want to adjust the earpiece volume, use the volume keys on the left side of the phone.

Press the ▲ key to increase and the ▼ key to decrease the volume.




In idle mode, you can adjust the key volume using the same keys.


## Answering a Call


When somebody calls you, the phone rings and shows the incoming call animation.

If the caller can be identified, the caller's phone number or name, if stored in your phonebook, is displayed.

**Note:** While the phone is ringing, you can mute the ring tone. Hold down one of the volume keys on the left side of the phone.

1. Press the  key or the **Accept** soft key to answer the incoming call.

If the **Anykey Answer** option in the **Extra Settings** menu (**Menu 4.8**) is checked, you can press any key to answer a call except for the  key and the **Reject** soft key (see page 91).

2. To reject an incoming call, press the **Reject** soft key.
3. End the call by pressing the  key.

**Note:** You can answer a call while using the phonebook or menu features.

## Viewing Missed Calls




If you are unable to answer a call for any reason, you can find out who was calling you, provided that this service is available. In this way, you can call the person back, if necessary.

The number of missed calls is displayed on the idle screen immediately after a call was missed.

To view the missed call immediately, proceed as follows.



1. Press the **View** soft key.


The number corresponding to the most recent missed call is displayed, if available.

2. To...	Then press the...
Scroll through the missed calls	 or  key.
Call the number displayed	 key.
Edit or delete a missed call number	<b>Select</b> soft key (see next page).


 
## Editing a Missed Call Number


**Note:** If the number corresponding to the missed call is not available, the **Edit** option is not displayed.

1. Press the **Options** soft key.
2. Press the  or  key to highlight the **Edit** option.
3. Press the **Select** soft key.
4. Change the number as required.

5. To...	Then press the...
Call the number	 key.
Store the number	<b>Save</b> soft key and enter the name and location required (for further details, refer to page 31).

## Deleting a Missed Call

1. Press the **Options** soft key.
2. If necessary, press the  or  key to highlight the **Delete** option.
3. Press the **Select** soft key.



You can press the  key at any time to exit the Missed Call feature.

**Note:** You can access the Missed Call feature at any time by selecting the **Missed Calls** menu option (**Menu 2.1**); for further details, see page 74.

## Selecting Functions and Options



### Switching Quickly to the Silent Mode



The silent mode is convenient when discretion is required and you wish to stop the phone from making any noise, in a theatre for example.

In idle mode, to switch your phone quickly to the silent mode, simply press and hold down the  key until the "Silent Mode" message and vibration icon () are displayed.

In the silent mode, your phone changes the sound settings as follows.

Option	New Setting
Alert Type ( <b>Menu 3.3</b> )	Vibration
Keypad Tone ( <b>Menu 3.4</b> )	Off
Message Tone ( <b>Menu 3.5</b> )	Light Only
Power Off Tone	Off
Extra Tones ( <b>Menu 3.7</b> )	Off

To exit the silent mode and reactivate the previous sound settings, press and hold down the  key again until "Exit Silent Mode" appears. The vibration icon () is no longer displayed.

Your phone offers a set of functions that allow you to customise your phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked  and . Each menu or sub-menu allows you to view and alter the settings of a particular function.

The roles of the soft keys vary according to the current context; the label on the bottom line of the display just above each key indicates its current role.

Example:





Press the left soft key to access the menu facility.

Press the right soft key to access the Phonebook feature.

To view the various functions/options available and select the one required, proceed as follows.

1. Press the appropriate soft key.

2. To...	Then press the...
Select the: <ul style="list-style-type: none"> <li>• Function displayed</li> </ul> or <ul style="list-style-type: none"> <li>• Option highlighted</li> </ul>	<b>Select</b> soft key or the <b>)</b> key.
View the next function or highlight the next option in a list	⤵ key or ⤴ key on the left side of the phone.
Move back to the previous function or option in a list	⤴ key or ⤵ key on the left side of the phone.
Move back up one level in the structure	( key, ↵ soft key or  key.
Exit the structure without changing the settings	 key.

In some functions, you may be asked for a password or PIN. Enter the required code and press the **OK** soft key.

**Note:** When you access a list of options, your phone highlights the current option. If, however, there are only two options, such as **On/Off** or **Enable/Disable**, your phone highlights the option that is not currently active, so that you can select it directly.

## Phonebook

You can store phone numbers and their corresponding names in the memory of your SIM card. In addition, you can store up to 500 numbers in the phone memory. The SIM card and phone memories, although physically separate, are used as if they were a single entity, called the phonebook.

### Storing a Number with a Name

 
There are two ways to store a number:

- Using the **Save** soft key in idle mode
- Using the **New Entry** option in the phonebook menu

### Storing a Number in Idle Mode

As soon as you start to enter a number, **Save** appears above the left soft key to allow you to store the number in the phonebook.

1. Key in the number to be stored.

**Note:** If you make a mistake while entering a number, correct it using the  key. For further details, refer to page 22.


 
2. When you are sure that it is correct, press the **Save** soft key.
3. Select an icon to identify the category of the number to be stored. Three categories are available:

 Mobile phone number

 Office number

 Home number

To select the category, press the **(** or **)** key, followed by the **Select** soft key.


- Choose a memory, either **SIM** or **Phone**, by pressing the  or  key and press the **Select** soft key.

**Note:** If you change phones, any numbers stored in your SIM card memory will automatically be available with the new phone, whereas any numbers stored in the phone memory must be stored again.


 
- Enter a name and press the **OK** soft key.

The maximum length of a name depends on your SIM card. For information on how to enter characters, see page 42.



The phone now displays the first free location in the selected memory. If that memory is full, the first free location in the other memory is displayed.


- If you do not want to save the number and name in the suggested location, press the  key to clear the location number and enter your preferred location by pressing the number keys.
- Press the **OK** soft key to store the name and number.


 

After storing, the phone displays the phonebook entry or name just created.

To...	Then press the...
Use the entry options	<b>Options</b> soft key.
Return to the idle screen	  key.


 
## Storing a Number Using the Phonebook Menu

- When the idle screen is displayed, press the **Name** soft key.
- Scroll to **New Entry** by pressing the  or  key and press the **Select** soft key.
- Select an icon to identify the category of the number to be stored.

**Note:** The E-mail icon () is available in this step. It allows you to save an E-mail address instead of a phone number.

- Choose a memory, either **SIM** or **Phone**, by pressing the  or  key and press the **Select** soft key.
  - Enter a name and press the **OK** soft key.
- The maximum length of a name depends on your SIM card. For information on how to enter characters, see page 42.
- Enter the number or E-mail address and press the **Save** soft key.
  - If you do not want to save the number and name in the suggested location, press the  key to clear the location number and enter your preferred location by pressing the number keys.
  - Press the **OK** soft key to store the name and number.

After storing, the phone displays the phonebook entry or name just created.

To...	Then press the...
Use the entry options	<b>Options</b> soft key.
Return to the idle screen	  key.

## Using Phonebook Entry Options

While accessing any phonebook entry, press the **Options** soft key to use the options for the entry.

To...	Then press the...
Select the highlighted option	<b>Select</b> soft key or the <b>)</b> key.
Highlight a different option	<b>←</b> or <b>→</b> key until the required option is highlighted.

The following options are available.

**Paste:** allows you to paste the selected number into the normal dialling mode. Use this option to dial a number similar to one in the phonebook, a different extension in the same office, for example.

Use the **Ⓢ** key to change the number as required; refer to page 22 for further details. When you are ready to dial, press the **↵** key.

**Edit:** allows you to edit the phonebook entry.

Select **One Entry** to change one of the numbers associated with the selected name. If you then change the name, the number is saved separately. Select **All Entry** to change the name assigned to the entry.

**Delete:** allows you to delete the selected name and number(s) from the phonebook. You are asked to confirm that you wish to delete the name and number(s) by pressing the **Yes** soft key.

**Copy:** allows you to copy the selected number to another location. Use this option to store a number similar to one already in memory; select the location for the new number. Once copied, edit the name and number.

**Caller Group:** allows you to assign the entry to a caller group so that the phone alerts you in a particular way when the corresponding person calls you. Select one of the ten groups available.

To remove an entry from a group, select the **No Group** option.

For more information on how to change caller group properties, see page 37.

**Add Entry:** allows you to add a new number in a different category (mobile, office, home or E-mail) to the currently selected name. A phonebook entry can contain a name and up to four numbers, one in each category.

## Searching for and Dialling a Number in the Phonebook

After storing numbers in the phonebook, you can search for them in two ways:

- By name
- By caller group

### Searching for a Number by Name

1. When the idle screen is displayed, press the **Name** soft key.
2. Press the **Select** soft key when **Search** is highlighted. You are asked to enter a name.
3. Enter the start of the name that you wish to find.

The phonebook entries are listed, starting with the first entry matching your input. This entry is also highlighted.

4. To...	Then press the...
View the high-lighted entry	<b>View</b> soft key.
Select a different entry	← or → key until the required entry is high-lighted.
Look for a name starting with a different letter	⌫ key to clear the letters already entered and then press the key labelled with the required letter.

5. Once you have found the required entry, press the ⏏ key to dial the number, or press the **Options** soft key to access the phonebook entry options; for further details, see page 34.

### Searching for a Number by Caller Group

- When the idle screen is displayed, press the **Name** soft key.
- Scroll to **Group Search** by pressing the ← or → key and press the **Select** soft key.
- Enter the first few letters of the group name that you want to find.  
The caller groups are listed, starting with the first group matching your input.
- Scroll to the required group by pressing the ← or → key and press the **View** soft key.  
The phonebook entries in the selected caller group are listed.

5. To...	Then press the...
View the high-lighted entry	<b>View</b> soft key.
Select a different entry	← or → key until the required entry is highlighted.



6. Once you have found the required entry, press the ⏏ key to dial the number, or press the **Options** soft key to access the phonebook entry options; for further details, see page 34.

### Editing a Caller Group

- When the idle screen is displayed, press the **Name** soft key.
- Scroll to **Group Edit** by pressing the ← or → key and press the **Select** soft key.
- Scroll through the group list by pressing the ← or → key.
- When the required group is highlighted, press the **Options** soft key.
- Select each option and change the settings, as required. The following options are available.  
**Call ring tone:** allows you to select the ring tone to be used when you receive a voice call from a person in the group.  
**SMS tone:** allows you to select the ring tone to be used when you receive a text message from a person in the group.

**Graphic:** allows you to select the graphic icon to be displayed when you receive a voice call from a person in the group.





**Group Name:** allows you to assign a name to the group; for information on how to enter characters, see page 42.

- When you have finished, press the  or  key.

## Speed-Dialling



Once you have stored phone numbers in the SIM card, you can set up to eight speed-dial entries and then dial them easily whenever you want, simply by pressing the associated number key.

### Setting Up Speed-Dial Entries

- When the idle screen is displayed, press the **Name** soft key.
- Scroll to **Speed Dial** by pressing the  or  key and press the **Select** soft key.
- Select the key to which you wish to assign the speed-dialling feature (keys  to ) and press the **OK** soft key.

**Note:** If you have already assigned a number to the key, the **Options** soft key replaces the **OK** soft key. Go to Step 6.

- Select the required phonebook entry from the list and press the **View** soft key.



- Select the required number if the entry has more than one number, by pressing the  or  key and press the **Select** soft key.
- Once you have assigned a number to the selected key, four options are available when you press the **Options** soft key.

**Change:** allows you to assign a different number to the key.



**Delete:** allows you to clear the setting so that no number is assigned to the key.

**Delete All:** allows you to clear the settings for all keys so that no numbers are assigned to any of the keys.

**Number:** allows you to view the number assigned to the key.

- When you have finished, press the  or  key.



### Speed-Dialling from the Phonebook

To speed-dial the numbers assigned to keys  to , press and hold down the appropriate key.

**Note:** Memory location 1 is reserved for your Voice Mail server number.

## Deleting All Phonebook Entries



You can delete all entries in either the phone or SIM card memory or in both memories together.

1. When the idle screen is displayed, press the **Name** soft key.
2. Scroll to **Delete All** by pressing the  or  key and press the **Select** soft key.

To...	Then press the...
Select the memory(ies) to be cleared	<b>Mark</b> soft key.
Cancel the selection	<b>Unmark</b> soft key.
Delete all entries in the selected memory(ies)	<b>Delete</b> soft key.







4. Enter the phone password and press the **OK** soft key.

**Note:** The password is preset to 00000000. To change it, see page 88.

5. When the confirmation message is displayed, press the **Yes** soft key.
6. When you have finished, press the  or  key.

## Checking the Memory Status

You can check how many names and numbers are stored in the phonebook (SIM card and phone memories) or how many free locations remain.


1. When the idle screen is displayed, press the **Name** soft key.
2. Select the **Memory Status** option by pressing the  or  key and press the **Select** soft key.
3. Press the  or  key to view the number of entries in the card and phone memories in relation to the total capacity of each memory.
4. When you have finished checking, press the  or  key.

# Entering Text

When using your phone, you will often need to enter text. For example, when storing a name in the phonebook, creating your personal greeting or scheduling events in your calendar. You can enter alphanumeric characters by using your phone's keypad.

You are provided with the following text input modes.

- **T9 mode**

This mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter – when you press the  key once, J, K or L may be displayed. The T9 mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional upper/lower-case character modes.

- **Upper/lower-case character modes**

These modes allow you to enter letters by pressing the key labelled with the required letter once, twice, three or four times until the letter is displayed.

- **Symbol mode**

This mode allows you to enter symbols, such as punctuation marks.

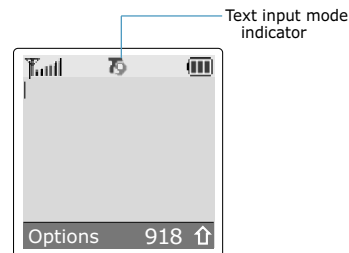
- **Number mode**







This mode allows you to enter numbers.

## Changing the Text Input Mode

When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the display.

Example: Writing a text message



To select the...	Then press the  soft key until...
T9 mode	 is displayed. See page 44.
Upper-case character mode	 is displayed. See page 46.
Lower-case character mode	 is displayed. See page 46.
Symbol mode	 is displayed. See page 47.
Number mode	 is displayed. See page 47.

## Using the T9 Mode

The T9 predictive text input mode allows you to key in any character using single keystrokes. This text input mode is based on a built-in dictionary.

1. When you are in the T9 predictive text input mode, start entering a word by pressing keys **2 ABC** to **9 WXYZ**. Press each key only once for one letter.

Example: To enter *Hello* in the T9 mode, press **4 GHJ**, **3 DEF**, **5 JKL**, **5 JKL** and **6 MNO**.

The word that you are typing appears in the display. It may change with each key that you press.

2. Enter the whole word before editing or deleting the keystrokes.
3. If the word is correct, start entering the next word.

 
Otherwise, press the **0 +**, **^** or **~** key repeatedly to display alternative word choices for the keys that you have pressed.

Example: Both *Of* and *Me* have the sequence **6 MNO**, **3 DEF**. The phone displays the most commonly used choice first.

4. Complete each word with a space by pressing the **↵** key.
- To type words not found in the T9 mode, change the text input mode to the upper/lower-case character input mode.

- To enter full stops, hyphens or apostrophes, press the **1 OP** key. The T9 mode applies grammar rules to ensure that the correct punctuation is used.

Example: **1 OP** is used twice to display two punctuation marks:



- To change the case in the T9 mode, use the **\*#+=** key. There are two cases:
  - Lower case
  - Upper case
- You can move the cursor by using the **(** and **)** keys. To delete letters, press the **↵/C** key. Press and hold down the **↵/C** key to clear the display.

## Using the Upper/Lower-Case Character Modes

Use the **100** to **0+** keys to enter your text.

1. Press the key labelled with the required letter:

- Once for the first letter
- Twice for the second letter
- And so on

2. Select the other letters in the same way.

**Note:** The cursor moves to the right when you press a different key. When entering the same letter twice or a different letter on the same key, just wait for a few seconds for the cursor to move right automatically, and then select the next letter.

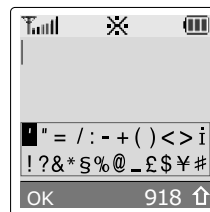
Refer to the table below for more information about the characters available.

Key	Characters in the Order Displayed	
	Upper Case	Lower Case
1	Space . 1 ! ? & i ÷ §	. % @ _ £ \$ ¥ ¤ §
2	A B C 2 Ä Å Æ Ç Γ	a b c 2 à ä å æ Γ
3	D E F 3 É Δ Φ	d e f 3 è é Φ
4	G H I 4 Θ Ψ	g h i 4 ì Ψ
5	J K L 5 Λ	j k l 5 λ
6	M N O 6 Ñ Ø Ö ö	m n o 6 ñ ø ò ö
7	P Q R S 7 Π Σ Ξ	p q r s 7 β Σ Ξ
8	T U V 8 Ü ü	t u v 8 ù ü
9	W X Y Z 9 Ω	w x y z 9 Ω
0	0 * # , ; ‘ “ =	/ : - + ( ) < >

- To insert a space, press the **#-\*** key.
- You can move the cursor by using the **(** and **)** keys. To delete letters, press the **⌫** key. Press and hold down the **⌫** key to clear the display.

## Using the Symbol Mode

The Symbol mode enables you to insert symbols in a text message.



Use the navigation keys to scroll to the required symbol and then press the **OK** soft key to insert the highlighted symbol into your message.

## Using the Number Mode

The Number mode enables you to enter numbers in a text message (a telephone number for example). Press the keys corresponding to the required digits before manually switching back to the appropriate text input mode.

## Options During a Call


Your phone provides a number of control functions that you can use during a call.

### Putting a Call on Hold

You can place the current call on hold whenever you want. You can make another call while you have a call in progress if this service is supported by the network. Of these two calls, one is active and the other is on hold and you can swap between the calls.

To place a call on hold, simply press the **Hold** soft key. You can reactivate the call whenever you want, by pressing the **Unhold** soft key.

To make a call while you have a call in progress, proceed as follows.

1. Key in the phone number that you wish to dial or look it up in the phonebook.
2. Press the  key to dial the second call.


The first call is automatically put on hold.

Or alternatively, proceed as follows.

1. Put the current call on hold by pressing the **Hold** soft key.
2. Make the second call in the normal way.

To swap between the two calls, simply press the **Swap** soft key.

The current call is placed on hold and the call on hold is reactivated so that you can continue conversing with the other party.


When you have finished, end each call normally by pressing the  key.

### Switching the Microphone Off (Mute)

You can temporarily switch your phone's microphone off, so that the other party cannot hear you.


Example: You wish to say something to another person in the room but do not want the other party to hear you.

To switch the microphone off temporarily, proceed as follows.

1. Press the **Options** soft key.
2. If necessary, press the  key to highlight the **Mute** option.
3. Press the **OK** soft key.

The other party can no longer hear you.

To switch the microphone back on, proceed as follows.

1. Press the **Options** soft key.
2. If necessary, press the  key to highlight the **Unmute** option.
3. Press the **OK** soft key.

The other party can hear you again.

## Muting/Sending Key Tones

---

These options allow you to turn the key tones off or on. If the **Mute keys** option is selected, your phone does not transmit the key tones. It allows you to press keys without hearing annoying key tones during a call.

**Note:** To communicate with answering machines or computerised telephony systems, the **Send keys** option must be selected.


## Sending DTMF Tones

---

You can send the DTMF (dual tone multi-frequency) tones corresponding to a number entered during a call.

This option is helpful when submitting a password or account number to an automated system, like a banking service.

To send DTMF tones, proceed as follows.


1. When you are connected to the teleservice system, press the **Options** soft key.
2. Press the  key to highlight the **Send DTMF** option.
3. Press the **OK** soft key.
4. Enter the number you wish to send and press the **OK** soft key.  
The tones corresponding to the number displayed are sent.

**Note:** You can also search for a number in the phonebook by pressing the **Name** soft key. For a more detailed description of the Phonebook feature, refer to page 31.

## Searching for a Number in the Phonebook

---


 
You can search for a number in the phonebook during a call.

1. Press the **Options** soft key.
2. Press the  key to highlight the **Phonebook** option.
3. Press the **OK** soft key.

The phonebook entries are listed.

4. Enter the name that you wish to find.


If you enter the start of the name, the phonebook entries are listed, starting with the first entry matching your input. The entry is also highlighted.

5. Scroll to an entry by pressing the  or  key, and press the **View** soft key to view the highlighted entry.

For a more detailed description of the Phonebook feature, refer to page 31.

## Using the SMS Service

---



If you receive an SMS (Short Message Service) message during a call, the message icon  flashes in the display. The **SMS Service** option enables you to use this feature.

For further details on the SMS service, refer to page 62.

## Answering a Second Call

You can answer an incoming call while you have a call in progress, if this service is supported by the network and you have set the **Call Waiting** menu option (**Menu 6.3**) to **Activate** (see page 107). You will be notified of an incoming call by a call waiting tone.

To answer a call while you have a call in progress, proceed as follows.

1. Press the  key to answer the incoming call. The first call is automatically put on hold.
2. To switch between the two calls, press the **Swap** soft key.  
To end a held call, press the **Options** soft key and select the **End Held Call** option.
3. To end the current call, press the  key.

## Making a Multiparty Call

A multiparty call is a network service that allows up to six people to take part simultaneously in a multiparty or conference call. For more information, contact your service provider.

### Setting up the Multiparty Call

1. Call the first participant in the normal way.
2. Call the second participant in the normal way. The first call is automatically put on hold.
3. To join the first participant to the multiparty call, press the **Options** soft key and select the **Join** option.

 
 

4. To add a new person to the multiparty call, call the person in the normal way, then press the **Options** soft key and select the **Join** option.

You can add incoming callers by answering the call and pressing **Options**, followed by **Join**. Repeat as required.

### Having a Private Conversation With One Participant

1. Press the **Options** soft key and choose the **Select one** option.

The list of call participants appears.

2. Highlight the required person, by pressing the  or  key, followed by the **Select** soft key or the  key.
3. Select the **Private** option.

Now you can talk privately with that person. The other participants can continue to converse with each other.




4. To return to the multiparty call, press the **Options** soft key and select **Join**.

All of the multiparty call participants can now hear each other.

## Dropping One Participant


1. Press the **Options** soft key and choose the **Select one** option.

The list of call participants appears.

2. Highlight the required person, by pressing the  or  key, followed by the **Select** soft key or the  key.

3. Select **Remove**.

The call is ended with that participant, but you can continue to talk with the other participants.






4. End the multiparty call by pressing the  key.

## Using the Menu




 




The phone offers a range of functions that allow you to tailor the phone to your needs. These functions are arranged in menus and sub-menus.

The menus and sub-menus can be accessed by scrolling with the navigation keys or by using the shortcuts.

### Accessing Menu Functions by Scrolling

1. In idle mode, press the **Menu** soft key to access the menu facility.
2. Scroll with the  and  keys to reach the required main menu, **Phone Settings** for example. Press the **Select** soft key or the  key to enter the menu.
3. If the menu contains any sub-menus, **Language** for example, you can access them by scrolling with the  and  keys and pressing the **Select** soft key.

If the menu that you have selected contains further options, repeat the same procedure.

4. To...	Then press the...
Scroll through the menus	 or  key or use the  and  keys on the left side of the phone.
Confirm the chosen setting	<b>Select</b> soft key or the  key.
Return to the previous menu level	 soft key or the  key.
Exit the menu without changing the settings	 key.

## Accessing Menu Functions by Using Shortcuts

The menu items (menu, sub-menus and options) are numbered and can be accessed quickly by using their shortcut number. The shortcut number is shown in the bottom right next to the **↵** soft key on the display. Simply press the **Menu** soft key and key in the required number.

**Note:** The numbers assigned to each menu option are indicated in the list on page 57. They may not match the menu number on the phone. It depends on the services supported by your SIM card.

Example: Accessing the **Language** option.

1. Press the **Menu** soft key.
2. Press **4** for **Phone Settings**.
3. Press **5** for **Language**.

The languages available are displayed directly.

## List of Menu Functions

The following list shows the menu structure available and indicates the:

- Number assigned to each option
- Page on which you can find a description of each feature

**Note:** If you use a SIM AT card that provides additional services, the **SIM AT** menu is displayed first when you press the **Menu** soft key to enter the menu facility. For further details, refer to your SIM card documentation.

### 1. Messages (see page 62)

- 1.1 Inbox
- 1.2 Outbox
- 1.3 Write New
- 1.4 Templates
- 1.5 Settings
  - 1.5.1 Setting 1\*
  - 1.5.2 Setting 2\*
  - 1.5.3 Setting 3\*
  - 1.5.4 Setting 4\*
  - 1.5.5 Setting 5\*
  - 1.5.6 Common Setting
- 1.6 Delete All
- 1.7 My Objects
  - 1.7.1 My Melody
  - 1.7.2 My Picture
  - 1.7.3 My Animation
  - 1.7.4 Delete All
- 1.8 Memory Status
  - 1.8.1 SIM memory
  - 1.8.2 PHONE memory
  - 1.8.3 CB memory
- 1.9 Voice Mail
  - 1.9.1 Connect to Voice Server
  - 1.9.2 Voice Service Number
- 1.10 Broadcast
  - 1.10.1 Read
  - 1.10.2 Receive
  - 1.10.3 Channel List
  - 1.10.4 Language

### 2. Call Records (see page 74)

- 2.1 Missed Calls
- 2.2 Received Calls
- 2.3 Dialed Calls
- 2.4 Delete All

\* Shown only if supported by your SIM card.

**2. Call Records** *(continued)*

- 2.5 Call Time
  - 2.5.1 Last Call Time
  - 2.5.2 Total Sent
  - 2.5.3 Total Received
  - 2.5.4 Reset Timers
- 2.6 Call Cost\*
  - 2.6.1 Last Call Cost
  - 2.6.2 Total Cost
  - 2.6.3 Max Cost
  - 2.6.4 Reset Counters
  - 2.6.5 Set Max Cost
  - 2.6.6 Price/Unit

**3. Sound Settings** *(see page 78)*

- 3.1 Ring Tone
- 3.2 Ring Volume
- 3.3 Alert Type
  - 3.3.1 Light Only
  - 3.3.2 Melody
  - 3.3.3 Vibration
  - 3.3.4 Vibra+Melody
- 3.4 Keypad Tone
  - 3.4.1 Off
  - 3.4.2 Cool
  - 3.4.3 Piano
  - 3.4.4 Tone
  - 3.4.5 Beep
- 3.5 Message Tone
  - 3.5.1 SMS Tone
  - 3.5.2 SMS-CB Tone
- 3.6 Power On/Off
  - 3.6.1 Off
  - 3.6.2 Classical
  - 3.6.3 Cheerful
- 3.7 Extra Tones
  - 3.7.1 Error Tone
  - 3.7.2 Minute Minder
  - 3.7.3 Connect Tone

**4. Phone Settings** *(see page 83)*

- 4.1 Infrared Activate
- 4.2 My Settings
  - 4.2.1 Wallpaper
  - 4.2.2 Menu Style
  - 4.2.3 Auto Key Lock
- 4.3 Greeting Message
- 4.4 Own Number
  - 4.4.1 Number 1
  - 4.4.2 Number 2
  - 4.4.3 Number 3
- 4.5 Language
- 4.6 Security
  - 4.6.1 PIN Check
  - 4.6.2 Change PIN
  - 4.6.3 Phone Lock
  - 4.6.4 Change Password
  - 4.6.5 SIM Lock
  - 4.6.6 FDN Mode\*
  - 4.6.7 Change PIN2\*
- 4.7 Display Settings
  - 4.7.1 Brightness
  - 4.7.2 Back Light
  - 4.7.3 Service Light
  - 4.7.4 Graphic Logo
- 4.8 Extra Settings
  - 4.8.1 Auto Redial
  - 4.8.2 Anykey Answer
- 4.9 Short Cut
  - 4.9.1 Key up
  - 4.9.2 Key down
  - 4.9.3 Key right
  - 4.9.4 Key left
- 4.10 Reset Settings

\* Shown only if supported by your SIM card.

**5. Organiser (see page 93)**

- 5.1 Calendar
- 5.2 To Do List
- 5.3 Time & Date
  - 5.3.1 Set Time
  - 5.3.2 Set Date
  - 5.3.3 World Time
  - 5.3.4 Time Format
- 5.4 Alarm
  - 5.4.1 Once Alarm
  - 5.4.2 Daily Alarm
  - 5.4.3 Morning Call
  - 5.4.4 Remove Alarm
  - 5.4.5 Autopower
- 5.5 Calculator
- 5.6 Currency Exchange

**6. Network Services (see page 103)**

- 6.1 Call Diverting
  - 6.1.1 Divert Always
  - 6.1.2 Busy
  - 6.1.3 No Reply
  - 6.1.4 Unreachable
  - 6.1.5 Cancel All
- 6.2 Call Barring
  - 6.2.1 All Outgoing
  - 6.2.2 International
  - 6.2.3 International Except to Home
  - 6.2.4 All Incoming
  - 6.2.5 Incoming While Abroad
  - 6.2.6 Cancel All
  - 6.2.7 Change Barring Password
- 6.3 Call Waiting
  - 6.3.1 Voice Calls
  - 6.3.2 Fax Calls
  - 6.3.3 Data Calls
  - 6.3.4 Cancel All
- 6.4 Network Selection
  - 6.4.1 Automatic
  - 6.4.2 Manual

**6. Network Services (continued)**

- 6.5 Caller ID
  - 6.5.1 Default
  - 6.5.2 Hide Number
  - 6.5.3 Send Number
- 6.6 Closed User Group
  - 6.6.1 Index List
  - 6.6.2 Outside Access
  - 6.6.3 Default Group
  - 6.6.4 Deactivate\*

**7. Fun Box (see page 111)**


- 7.1 Games
  - 7.1.1 Honey Ball
  - 7.1.2 Hamster Box
- 7.2 WAP Browser
  - 7.2.1 Home
  - 7.2.2 Favorite
  - 7.2.3 http://
  - 7.2.4 Settings
  - 7.2.5 Clear Cache
- 7.3 Downloads
  - 7.3.1 Games & More
  - 7.3.2 Sounds
  - 7.3.3 Pictures
  - 7.3.4 DNS Setting


---

\* Shown only if the Closed User Group feature is active.

# Messages

The SMS (Short Message Service) function is a network service and may not be supported by your network. Messages can be sent by text, fax, E-mail and paging messaging systems, provided that these services are supported by your network. To send text messages by phone, you must obtain the number of the SMS centre from your service provider.

When the message icon  appears, you have received new text messages. If the message memory is full, an error message is displayed and you cannot receive any new messages. Use the **Delete** option in your inbox and outbox to delete obsolete messages.





When you receive a new message in the key lock mode, you cannot view it without unlocking the keypad. To do so, press the **Unlock** soft key and the  key.

## Inbox *(Menu 1.1)*

---

The inbox is used to store the messages that you have received.

When you select this menu, the list of messages in the inbox is displayed with the senders' phone numbers or names, if available in your phonebook.

1. Select the message you wish to read from the list and press the **View** soft key to view the message contents.
2. To scroll through the message, press the  or  key.
3. To scroll to the previous or next message, press the  or  key.

While reading a message, you can choose the following options by pressing the **Options** soft key.

**Delete:** allows you to delete the message.

**Send:** allows you to resend the message. For further information on how to send a message, see page 65.

**Reply:** allows you to reply to the sender by sending a text message.

**Call Back:** allows you to call the sender back.

**Cut Address:** allows you to extract URL or E-mail addresses or phone numbers from the message text, so that you can save them in the phone memory.

**Move To Phone:** allows you to move the message from the SIM card to the phone memory. This option is only available when you select a message stored in the SIM card.

**Move To Sim:** allows you to move the message from the phone memory to the SIM card. This option is only available when you select a message stored in the phone memory.

**Select Objects:** allows you to save media objects, such as sounds or images, from the message into your phone. You can then use the objects when writing a message; for details, see page 66.

## Outbox *(Menu 1.2)*

---

The outbox is used to store the messages that you have already sent or will send.

When you select this menu, the list of messages in the outbox is displayed with the recipients' phone numbers or names, if available in your phonebook.

1. Select the message you wish to read from the list and press the **View** soft key to view the message contents.
2. To scroll through the message, press the **⏪** or **⏩** key.
3. To scroll to the previous or next message, press the **⏮** or **⏭** key.

While reading a message, you can choose the following options by pressing the **Options** soft key.

**Delete:** allows you to delete the message.

**Send:** allows you to (re)send the message. For further information on how to send a message, see page 65.

**Cut Address:** allows you to extract URL or E-mail addresses or phone numbers from the message text, so that you can save them in the phone memory.

**Move To Phone:** allows you to move the message from the SIM card to the phone memory. This option is only available when you select a message stored in the SIM card.

**Move To Sim:** allows you to move the message from the phone memory to the SIM card. This option is only available when you select a message stored in the phone memory.

**Select Objects:** allows you to save media objects, such as sounds or images, from the message into your phone. You can then use the objects when writing a message; for details, see page 66.

## Write New *(Menu 1.3)*

---

Via this menu, you can write and send a text message.

**Note:** You can enter up to 918 alphanumeric characters for your message. If you add media objects to the message, the number of characters you can enter is decreased.

### Creating a Simple Text Message

1. Create your message as required.

**Note:** For information on how to enter characters, refer to page 42.

2. When you have completed your message, press the **Options** soft key. The following options are available.

**Send:** allows you to send the message. The message will be deleted after sending.

**Save and Send:** allows you to save a copy of the message in the specified memory and then send the message to the required destination. You can read the message in your outbox.

**Save:** allows you to save the message to the specified memory so that it can be sent later. You can read the message in your outbox.

For information about the **Text Formatting, Add Objects, Add Templates, Add Phonebook, Add Bookmark** and **Language** options, see "Creating a Message Using the Options" on page 66.

3. Select **Send** or **Save and Send**, and press the **Select** soft key.

If you just want to save the message, select **Save**. After saving the message, the phone returns to the **Messages** menu.

4. Select the memory in which the message is to be saved and press the **OK** soft key.
5. Enter a destination number.  
To look for a number in your phonebook, press the **Name** soft key and select one from the list.
6. Press the **OK** soft key. The message is sent.

**Note:** If the phone fails to send the message, it asks you if you want to retry. Press the **OK** soft key to resend it. Otherwise, press the **Exit** soft key.

## Creating a Message Using the Options

1. Create your message as required.
2. Press the **Options** soft key.
3. Select one of the following options as required by using the **↵** and **⏪** keys and pressing the **Select** soft key.

**Text Formatting:** allows you to format the style of the text. For the **Size** attribute, the **Normal**, **Large** and **Small** sizes are available. For the **Underline** and **Strikethrough** attributes, select **On** or **Off**. The attributes can be combined.

**Add Objects:** allows you to add the required sound, melody, picture or animation to the message. Select the category of object to be added. In each category, you can select the various factory-set items or choose an item received from other sources, such as the Internet or other phones.

**Add Templates:** allows you to apply one of the preset message templates to the text. Select one of the five messages predefined via the **Templates** menu option (**Menu 1.4**); for further details, see below.

**Add Phonebook:** allows you to insert a phonebook entry in your message. Select the appropriate entry in the list.

**Add Bookmark:** allows you to add the address of a Web page stored in your Favourites list (**Menu 7.2.2**). Select the Web page from the list.

**Language:** allows you to change the language to be used in the T9 input mode. Select the language to be used.

4. Complete the message, and send or save it by following the procedure from Step 3 on page 65.

## Templates *(Menu 1.4)*

Using this menu, you can preset up to five messages that you use most frequently. Scroll through the template list using the **↵** and **⏪** keys. When the required message template is highlighted, press the **Options** soft key.

**Edit:** allows you to write a new message or edit the selected message.

**Note:** For information on how to enter characters, refer to page 42.

**Send Message:** allows you to recall the selected message. Once you have completed the message, you can send, save and send, or simply save it. For details on how to send a message, see page 65.

**Delete:** allows you to delete the selected message. You are asked to confirm the deletion by pressing the **Yes** soft key.

## Settings *(Menu 1.5)*

---

Via this menu, you can set up default SMS information. A setting group is a collection of settings required to send messages. The number of setting groups available depends on the capacity of your SIM card.

**Note:** The last setting group accessed is used automatically when you send a message.

**Setting x** (where **x** is the setting group number): each group has its own sub-menu.

**Service Centre:** allows you to store or change the number of your SMS centre required when sending messages. You must obtain this number from your service provider.

**Default Destination:** allows you to store the default destination number. The number will automatically be displayed on the Destination screen when you create a message.

**Default Type:** allows you to set the default message type (Text, Fax, E-mail and Paging). The network can convert the messages into the selected format.

**Default Validity:** allows you to set the length of time for which your text messages will be stored at the message centre while attempts are made to deliver them.

**Setting Name:** allows you to give a name to the setting group currently being defined.

**Common Setting:** the following options are available.

**Reply Path:** allows the recipient of your SMS message to send you a reply message via your message centre, if the service is provided by the network.

**Delivery Reports:** allows you to activate or deactivate the report function. When this function is activated, the network informs you whether your message has been delivered or not.

**Bearer Selection:** allows you to choose between **GSM** and **GPRS**.

## Delete All *(Menu 1.6)*

---

This menu option allows you to delete all of the messages in each message box. You can also delete all of your messages at one time.

To...	Press the...
Select a message box to clear	<b>←</b> or <b>→</b> key. To delete all of your messages, select <b>All Messages</b> .
Place a check mark	<b>Mark</b> soft key.
Remove the check mark	<b>Unmark</b> soft key.
Delete the marked messages	<b>Delete</b> soft key.

When a confirmation message is displayed, press the **Yes** soft key to confirm.

## My Objects *(Menu 1.7)*

After saving any objects received in messages into your phone memory, using the **Select Objects** option (see page 63), you can see the objects in this menu.

Three categories of objects are available:

- **My Melody**
- **My Picture**
- **My Animation**

To delete a selected object, press the **Delete** soft key.

You can delete all objects using the **Delete All** option (**Menu 1.7.4**).

To...	Then press the...
Select a category of objects to be deleted	<b>Mark</b> soft key.
Cancel the selection	<b>Unmark</b> soft key.
Delete the objects in the selected category(ies)	<b>Delete</b> soft key.

If you want to delete all objects, select **All Objects**.

## Memory Status *(Menu 1.8)*


This menu shows how many messages are currently stored in the SIM, phone and cell broadcast (CB) memories.

## Voice Mail *(Menu 1.9)*


This menu provides you with a way of accessing your voice mailbox (if provided by your network).

The following options are available.

**Connect to Voice Server:** before using this feature, you must enter the voice server number obtained from your service provider (see menu **1.9.2**). You can then select this option and simply press the **OK** soft key to listen to your messages.

To quickly connect to the voice server, press and hold down the  key in idle mode.

**Voice Service Number:** allows you to change the voice mail server number, if necessary.

To...	Then press the...
Enter the server number	Corresponding numeric keys.
Correct a digit	 key.
Move the cursor to the left/right without clearing the digit	<b>(</b> or <b>)</b> key.

**Note:** Voice Mail is a network feature. Please contact your service provider for more information.

## **Broadcast** *(Menu 1.10)*

---

This network service allows you to receive text messages on various topics, such as the weather or traffic. Messages are displayed immediately they are received, provided that:

- The phone is in idle mode
- The **Receive** option is set to **Enable**
- The message channel is currently active in the channel list

The following options are available.

**Read:** lets you view the message. **Volatile** displays the messages from the network, but loses its contents as soon as the phone is switched off. Scroll through the message using the **←** and **→** keys. While reading a message, press the **Save** soft key to store the message in the **Archive** box for later retrieval.

**Receive:** allows you to enable or disable the reception of broadcast messages.

**Channel List:** allows you to indicate the channels from which you wish to receive broadcast messages. The following options are available.

Select: used to enable or disable channels in the list by marking or unmarking them respectively.

Add Channel: used to declare the ID and title for a new channel.

Delete: used to remove a channel from the list.

Edit: used to change the ID and title of an existing channel.


**Language:** allows you to select your preferred language to be used when displaying cell broadcast messages.

Please contact your service provider for more information.

## Call Records

Via this menu, you can view the:

- Missed, received or dialled calls
- Length of a call you made or received
- Cost of your calls


**Note:** You can access all numbers in the three types of call records by pressing the  key in idle mode.

### Missed Calls *(Menu 2.1)*

This option lets you view the last 20 unanswered calls.

The number and name, if available, are displayed, together with the date and time at which the call was received. By pressing the **Options** soft key, you can:

- Delete the call from the list
- Edit the number, if available, and save it in the phonebook


You can also dial the number by pressing the  key.

### Received Calls *(Menu 2.2)*

This option lets you view the last 20 phone calls answered.

The number and name, if available, are displayed, together with the date and time at which the call was received. By pressing the **Options** soft key, you can:

- Delete the call from the list
- Edit the number, if available, and save it in the phonebook


You can also dial the number by pressing the  key.

### Dialled Calls *(Menu 2.3)*

This option lets you view the last 20 numbers dialled.


 
The number and name, if available, are displayed, together with the date and time at which the call was made. By pressing the **Options** soft key, you can:

- Delete the number
- Edit the number and save it in the phonebook

You can also dial the number by pressing the  key.

### Delete All *(Menu 2.4)*

You can delete all numbers stored in each call record.

To...	Then press the...
Select the type(s) of calls to be deleted	 or  key, followed by the <b>Mark</b> soft key.
Cancel the selection	<b>Unmark</b> soft key.
Delete all calls of the selected type	<b>Delete</b> soft key.

When the confirmation message is displayed, press the **Yes** soft key to confirm.

## Call Time *(Menu 2.5)*

---

This option lets you view the timers for calls made and received.

**Note:** The actual time invoiced for calls by your service provider may vary, depending on network features, such as rounding-off for billing purposes.

The following timers are available.

**Last Call Time:** length of the last call.

**Total Sent:** total length of all calls made since the timer was last reset.

**Total Received:** total length of all calls received since the timer was last reset.

**Reset Timers:** option used to reset the call timers; you must first enter the phone password (see page 124) and then press the **OK** soft key.

## Call Cost\* *(Menu 2.6)*

---

This feature lets you view the cost of calls. Depending on your SIM card, this menu option may not be shown.

The following timers are available.

**Last Call Cost:** cost of the last call made.

**Total Cost:** total cost of all calls made since the cost counter was last reset. If the total cost exceeds the maximum cost set via the **Set Max Cost** option, you can no longer make any calls until you reset the counter.

**Max Cost:** maximum cost set via the **Set Max Cost** option (see below).

**Reset Counters:** option used to reset the cost counter; you must first enter your PIN2 (see page 126) and then press the **OK** soft key.

**Set Max Cost:** option used to enter the maximum cost that you authorise for your calls; you must first enter your PIN2 (see page 126) and then press the **OK** soft key.

**Price/Unit:** option used to set the cost of one unit; this price per unit is applied when calculating the cost of your calls; you must first enter your PIN2 (see page 126) and then press the **OK** soft key.

---

\* Shown only if supported by your SIM card.

# Sound Settings

You can use the Sound Settings feature to customise various settings, such as the:

- Ring melody, volume and type
- Sounds made when you press a key, make an error or receive a message

**Note:** When the phone is in the silent mode (see page 28), you cannot change the sound settings.

## Ring Tone *(Menu 3.1)*

---

 

 
 
This option allows you to select the required ring melody.

You can choose between many different melodies. Each time you select a melody, it is played for a few seconds. If you have downloaded any sounds from the Internet or EasyGPRS program, you can view the list in this menu.

## Ring Volume *(Menu 3.2)*

---

This option allows you to adjust the ring volume to one of five levels.

Use the  and  keys or the  and  keys on the left side of the phone.

## Alert Type *(Menu 3.3)*

---

This option allows you to specify how you are to be informed of any incoming calls.

The following options are available.

**Light Only:** only the backlight is switched on; the phone neither rings nor vibrates.

**Melody:** the phone rings using the ring melody selected via the **Ring Tone** menu option (**Menu 3.1**); see page 78.

**Vibration:** the phone vibrates but does not ring.

**Vibra+Melody:** the phone first vibrates three times and then starts ringing.

## Keypad Tone *(Menu 3.4)*

---

This option allows you to select the tone that the keypad generates when you press a key.

The following options are available.

**Off:** the keys do not make any sound.

**Cool:** each key, when pressed, generates a pure sound.

**Piano:** each key, when pressed, generates a different note in the musical scale.

**Tone:** each key, when pressed, makes a different sound.

**Beep:** each key, when pressed, makes the same sound.

## Message Tone *(Menu 3.5)*

---

This option allows you to select how the phone informs you that a new message has been received.

### SMS Tone *(Menu 3.5.1)*

This option allows you to select how the phone informs you that a new SMS message has been received.

The following options are available.

**Off:** the phone does not use the SMS tone.

**Light Only:** the service light on the top left of the phone flashes.

**Vibration:** the phone vibrates.

**Single Beep:** the phone beeps once.

**SMS ToneX:** the phone uses an SMS tone. You are provided with several SMS tones.

### SMS-CB Tone *(Menu 3.5.2)*

This option allows you to select how the phone informs you that a new cell broadcast (CB) message has been received.

The following options are available.

**Off:** the phone does not use the CB tone.

**Light Only:** the service light on the top left of the phone flashes.

**Vibration:** the phone vibrates.

**Single Beep:** the phone beeps once.

**SMS-CB ToneX:** the phone uses a CB tone. You are provided with several CB tones.

## Power On/Off *(Menu 3.6)*

---

This option allows you to turn on or off the sounds that the phone generates when it is switched on and off.

The following options are available.

**Off:** when you switch the phone on and off, you do not hear a jingle.

**Classical:** when you switch the phone on and off, you hear the default jingle.

**Cheerful:** when you switch the phone on and off, you hear a cheerful jingle.

## Extra Tones *(Menu 3.7)*

You can customise various other tones used by the phone.

To turn a given tone...	Then press the...
On	<b>On</b> soft key. A check mark is displayed in front of the option.
Off	<b>Off</b> soft key. The check mark is no longer displayed.

The following options are available.

**Error Tone:** indicates whether the phone must beep to inform you if you have made a mistake.

**Minute Minder:** indicates whether the phone must beep every minute during an outgoing call to keep you informed of the length of your call.

**Connect Tone:** indicates whether the phone must beep when the phone connects to the network.

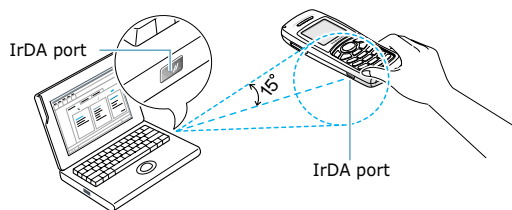
## Phone Settings

Many different features of your phone can be customised to suit your preferences. All of these features are accessed via the **Phone Settings** menu.

### Infrared Activate *(Menu 4.1)*

This feature allows you to send or receive data/fax through the infrared port. To use an infrared connection, you must:

- Configure and activate an IrDA-compliant infrared port on your PC
- Activate the infrared feature on the phone; the IrDA icon (📡) appears on the top line of the display
- Align the IrDA port on the phone with the IrDA port on your computer



The connection is ready for data transmission.

If there is no communication between your phone and the IrDA-compliant device within 30 seconds of activating the feature, it is automatically deactivated.

**Note:** For best results, it is highly recommended that you use the optional data cable. You can buy one from your local Samsung dealer.



## My Settings *(Menu 4.2)*

You can change the background image and the menu display style according to your preference.

### Wallpaper *(Menu 4.2.1)*

This option allows you to change the background image (wallpaper) to be displayed in idle mode.

To change the background image, proceed as follows.

1. Scroll through the list by pressing the  or  key.

You have various preset images available. You can also select a blank background or any images downloaded from the Internet or the EasyGPRS program.

2. Press the **View** soft key when the required image is highlighted.

The selected image is displayed.

3. After viewing the image, press the **Select** soft key to display it on the idle screen.

4. <b>To display the...</b>	<b>Press the...</b>
Current date and time on top of the wallpaper image	<b>Yes</b> soft key.
Wallpaper image only	<b>No</b> soft key.

### Menu Style *(Menu 4.2.2)*

This option allows you to select the menu display style. You can choose between **Bar Style** and **Zoom Style**.

## Auto Key Lock *(Menu 4.2.3)*

This menu option allows you to set the phone to automatically lock the keys if no key is pressed within a given period of time. This feature is useful to avoid pressing keys by mistake.



To use this feature, select the length of time for which the phone waits before it locks the keypad. **15 Sec**, **30 Sec**, **1 Min** and **2 Min** are available.

If you do not want to use this feature, select **Off**.

**Note:** You can manually lock the keypad. For further details, see page 21.

## Greeting Message *(Menu 4.3)*

This option allows you to set a greeting message to be displayed briefly when the phone is switched on. When you select this menu option, the current message is displayed.

To...	Then press the...
Clear the existing message	 key and hold it down until the message is cleared.
Enter a new message	Appropriate alphanumeric keys.
Change the text input mode	 soft key.

For information on how to enter characters, refer to page 42.

## Own Number *(Menu 4.4)*

---

This feature allows you to:

- Assign a name to your own phone number registered on your SIM card
- Edit the name and number

This function is a memory aid, which you can use to check your own phone number if you need to do so.

Any changes made here do not in any way affect the actual subscriber number on your SIM card.

## Language *(Menu 4.5)*

---

You can select a display language. When the language option is set to **Automatic**, the language is automatically selected according to the language of the SIM card used.

## Security *(Menu 4.6)*

---

The Security feature enables you to restrict the use of your phone to:

- The people of your choice
- The types of calls of your choice

Various codes and passwords are used to protect the features of your phone. They are described in the following sections (see also pages 124-127).

## PIN Check *(Menu 4.6.1)*

When the PIN Check feature is enabled, you must enter your PIN each time you switch the phone on. Consequently, any person who does not have your PIN cannot use your phone without your approval.

**Note:** Before disabling the PIN Check feature, you must enter your PIN.

To change your PIN, refer to the **Change PIN** menu option (**Menu 4.6.2**).

The following options are available.

**Disable:** the phone connects directly to the network when you switch it on.

**Enable:** you must enter the PIN each time the phone is switched on.

## Change PIN *(Menu 4.6.2)*

This feature allows you to change your current PIN to a new one, provided that the PIN Check feature is enabled. You must enter the current PIN before you can specify a new one.

Once you have entered a new PIN, you are asked to confirm it by entering it again.

## Phone Lock *(Menu 4.6.3)*

When the Phone Lock feature is enabled, the phone is locked and you must enter the 8-digit phone password each time the phone is switched on.

The password is factory set to 00000000. To change the phone password, refer to the **Change Password** menu option (**Menu 4.6.4**) on page 88.

Once the correct password has been entered, you can use the phone until you switch it off.

The following options are available.

**Disable:** you are not asked to enter the phone password when you switch the phone on.

**Enable:** you are required to enter the phone password when you switch the phone on.

### **Change Password** *(Menu 4.6.4)*

The Change Password feature allows you to change your current phone password to a new one. You must enter the current password before you can specify a new one.

The password is factory set to 00000000. Once you have entered a new password, you are asked to confirm it by entering it again.

### **SIM Lock** *(Menu 4.6.5)*

When the SIM Lock feature is enabled, your phone only works with the current SIM. You must enter the SIM lock code.

Once you have entered the SIM lock code, you are asked to confirm it by entering it again.

To unlock the SIM, you must enter the SIM lock code.

### **FDN Mode** *(Menu 4.6.6)*

The FDN (Fixed Dial Number) mode, if supported by your SIM card, allows you to restrict your outgoing calls to a limited set of phone numbers.

The following options are available.

**Disable:** you can phone any number.

**Enable:** you can only call phone numbers stored in the phonebook. You must enter your PIN2.

**Note:** Not all SIM cards have a PIN2. If your SIM card does not, this menu option is not displayed.

To change your PIN2, refer to the **Change PIN2** menu option (**Menu 4.6.7**) below.

### **Change PIN2** *(Menu 4.6.7)*

The Change PIN2 feature allows you to change your current PIN2 to a new one. You must enter the current PIN2 before you can specify a new one.

Once you have entered a new PIN2, you are asked to confirm it by entering it again.


 
 
 
**Note:** Not all SIM cards have a PIN2. If your SIM card does not, this menu option is not displayed.

## Display Settings *(Menu 4.7)*

### Brightness *(Menu 4.7.1)*

This option allows you to adjust the brightness of the display to see it better in different lighting conditions.

To adjust the display brightness, proceed as follows.

1. Adjust the brightness using the  and  keys or the  and  keys on the left side of the phone.
2. When you are satisfied, press the **OK** soft key to save the selection.

### Back Light *(Menu 4.7.2)*

You can select whether or not the phone uses the backlight. A marginal increase in standby/talk time can be achieved by turning the backlight off.

Select the length of time for which the backlight is on. The backlight comes on when you press a key or receive a call or message and lights up for the specified length of time. Then it dims and finally switches to the digital clock, conserving your battery power.

If you do not want to use the backlight, select **Off**.

### Service Light *(Menu 4.7.3)*

This option allows you to select whether or not the service light on the top left of the phone is used and in which colour it flashes.

Select one of the seven colours available. When the phone is ready for use, the service light will flash in the appropriate colour.

If you do not wish to use the service light, select **Off**.

### Graphic Logo *(Menu 4.7.4)*

This option allows you to display your operator's logo instead of its name.

**On:** the operator logo stored in your phone is displayed in idle mode; if no logo has been stored, the operator name is displayed.

**Off:** the operator name is displayed in idle mode.

## Extra Settings *(Menu 4.8)*



 
You can turn the automatic redialling or answering features on or off.


To turn a feature...	Then press the...
On	<b>On</b> soft key. A check mark is displayed in front of the option.
Off	<b>Off</b> soft key. The check mark is no longer displayed.

The following options are available.

**Auto Redial:** when this option is checked, the phone makes up to ten attempts to redial a phone number after an unsuccessful call.

**Note:** The interval between two call attempts varies.

**Anykey Answer:** when this option is checked, you can answer an incoming call by pressing any key, except the  key, the  key and the **Reject** soft key. To reject the call, press the  key or the **Reject** soft key.



When this option is unchecked, you can only press the  key or the **Accept** soft key.

## Short Cut *(Menu 4.9)*

---

The navigation keys can be used as shortcut keys. When held down in idle mode, they allow you to access specific menu options directly.

To assign a shortcut to a key, proceed as follows.

 

1. Select the key to be used as a shortcut key by pressing the  or  key, followed by the **Select** soft key.

**Key up** ()

**Key down** ()

**Key right** ()

**Key left** ()

2. Select the menu option to be assigned to the key by pressing the  or  key.

**Note:** To deactivate a shortcut key, select the **None** option.

3. Press the **Select** soft key to save the selection.

## Reset Settings *(Menu 4.10)*

---

You can easily reset your phone to its default settings. To do so, proceed as follows.

1. Select the **Reset Settings** menu option.
2. Enter the 8-digit phone password and press the **OK** soft key.

**Note:** The password is preset to 00000000. To change this password, refer to page 88.

# Organiser

The Organiser feature enables you to:

- View the calendar and organise your schedule
- Define a list of things to do
- Set the current date and time
- Set the alarm so that the phone rings at a specific time (to remind you of an appointment for example)
- Use the phone as a calculator for basic mathematical equations or currency exchange operations

## Calendar *(Menu 5.1)*


 
---

With the Calendar feature, you can:

- Consult the calendar
- Write memos to keep track of your schedule and trigger an alarm if necessary

### Consulting the Calendar

When you select the **Calendar** menu option (**Menu 5.1**), the calendar is displayed. The following options are available when you press the **Options** soft key.

**Search all:** displays all memos set, regardless of the day and starting with the oldest. To scroll through the memos, press the  or  key.

**Delete all:** allows you to delete all memos. You are asked to confirm your action.

**Go to date:** allows you to jump to a specific date.

**Exit:** exits the Calendar feature and returns to the idle mode.

## Writing a Memo

To write or edit a memo on a specific date, proceed as follows.

1. Select the required date in the calendar, using the navigation keys.

**Note:** To skip to the previous or next month, press the ▲ or ▼ key on the left side of the phone.

2. Press the **Select** soft key.

An empty memo screen is displayed to allow you to enter your memo.

3. Enter your memo and then press the **OK** soft key.

**Note:** For information on how to enter characters, refer to page 42.

You are asked if you wish to set the alarm.

4. If you want the alarm to ring on the chosen day, press the **Yes** soft key. Otherwise, press the **No** soft key.
5. If you pressed the **Yes** soft key, set the time for the alarm and press the **OK** soft key.

You can select a melody for the alarm by pressing the **Melody** soft key.

The colour of the date is changed to green to indicate that a memo exists.

## Viewing a Memo

When you select a day for which a memo already exists on the calendar, the most recent memo on that day is displayed.

If several memos exist, you can browse through them using the ◀ and ▶ keys.

To add a new memo on the same day, press the **New** soft key.

The following options are available when you press the **Options** soft key.

**Edit:** allows you to change the memo text.

**Alarm:** allows you to set an alarm to ring on the chosen day. If the alarm is already set, you can change or remove it.

**Delete:** allows you to delete the memo.

**Copy to:** allows you to copy the memo to another date.

**Move to:** allows you to change the date and/or time of the memo.



## To Do List *(Menu 5.2)*

This feature allows you to:

- Draw up a list of tasks to be done
- Assign a priority and deadline to each task
- Sort the tasks by priority and status mark




### Creating the To Do List

1. Press the **New** soft key.
2. Enter the first task.
 


 
 
**Note:** You can enter up to 40 characters. For information on how to enter characters, see page 42.
3. Press the **OK** soft key.
4. Select high, normal or low priority using the  or  key and press the **Select** soft key.
5. Enter your deadline.
 

If you do not want to set a deadline, press the **Skip** soft key.
6. Press the **OK** soft key.

## Editing the To Do List

If tasks are already defined in the To Do List when you select the **To Do List** menu option (**Menu 5.2**), the current contents are displayed with a status mark and priority ( for high,  for normal and  for low).

The following options are available.

To...	Then...
View the details for a specific task	<ul style="list-style-type: none"> <li>• Highlight the task.</li> <li>• Press the <b>View</b> soft key.</li> <li>• Scroll through the tasks using the  and  keys, if necessary.</li> </ul>
Change the status of a specific task	<ul style="list-style-type: none"> <li>• Highlight the task.</li> <li>• Press the  key to mark the task as completed as of the current date and time.</li> </ul> <p>or</p> <ul style="list-style-type: none"> <li>• Highlight the task.</li> <li>• Press the <b>Options</b> soft key.</li> <li>• Select the <b>Mark</b> option.</li> <li>• Select the appropriate status (<b>Done</b> or <b>Undo</b>).</li> </ul>
Create a new task	<ul style="list-style-type: none"> <li>• Press the <b>Options</b> soft key.</li> <li>• Select the <b>New</b> option.</li> <li>• Enter the text, priority and deadline for the task.</li> </ul>
Edit an existing task	<ul style="list-style-type: none"> <li>• Highlight the task.</li> <li>• Press the <b>Options</b> soft key.</li> <li>• Select the <b>Edit</b> option.</li> <li>• Change the text, priority and deadline for the task.</li> </ul>

To...	Then...
Sort the existing tasks by priority or status	<ul style="list-style-type: none"> <li>• Press the <b>Options</b> soft key.</li> <li>• Select the <b>Sort</b> option.</li> <li>• Select the sort criterion (<b>High</b>, <b>Low</b>, <b>Done</b> or <b>Undo</b>).</li> </ul>
Copy a task	<ul style="list-style-type: none"> <li>• Highlight the task.</li> <li>• Press the <b>Options</b> soft key.</li> <li>• Select the <b>Copy</b> option.</li> <li>• Change the text, priority and deadline for the task as required.</li> </ul>
Copy a task to the calendar	<ul style="list-style-type: none"> <li>• Highlight the task.</li> <li>• Press the <b>Options</b> soft key.</li> <li>• Select the <b>Copy to calendar</b> option.</li> <li>• Change the text and deadline for the task and set the alarm as required.</li> </ul>
Delete a task	<ul style="list-style-type: none"> <li>• Highlight the task.</li> <li>• Press the <b>Options</b> soft key.</li> <li>• Select the <b>Delete</b> option.</li> </ul>
Delete all tasks	<ul style="list-style-type: none"> <li>• Press the <b>Options</b> soft key.</li> <li>• Select the <b>Delete all</b> option.</li> <li>• Confirm the deletion by pressing <b>OK</b>.</li> </ul>
Exit the To Do List	<ul style="list-style-type: none"> <li>• Press the <b>Options</b> soft key.</li> <li>• Select the <b>Exit</b> option.</li> </ul>

## Time & Date *(Menu 5.3)*

This option allows you to change the current time and date displayed. You can also check the current time for Greenwich Mean Time (GMT) and 21 major cities around the world.

The following options are available.

**Set Time:** allows you to enter the current time. You can choose the time format via the **Time Format** menu option (**Menu 5.3.4**).

**Note:** Before setting the time, you must specify your time zone, in the **World Time** menu option (**Menu 5.3.3**).

**Set Date:** allows you to enter the day, month and year.

**World Time:** allows you to check the current time for Greenwich Mean Time (GMT) and 21 major cities around the world, using the ( **l** and **r** ) keys.

The screen shows the:

- City name
- Current date and time
- Time difference between the selected city and your city if you have set the local time (see below for further details) or GMT (by default)

To select the time zone in which you are located, proceed as follows.

1. Select the city corresponding to your time zone by pressing the ( **l** or **r** ) key one or more times. The local date and time are displayed.
2. Press the **Set** soft key.

**Time Format:** allows you to change the time format to **24 Hours** or **12 Hours**.

## Alarm *(Menu 5.4)*

---

This feature allows you to:

- Set the alarm to ring at a specific time
- Set the phone to switch on automatically and ring the alarm even if the phone is switched off (**Autopower** menu option set to **Enable**)

The following options are available.

**Once Alarm:** the alarm rings only once and is then deactivated.

**Daily Alarm:** the alarm rings every day at the same time.


**Morning Call:** the alarm rings to wake you up in the morning.

To set the alarm, proceed as follows.

1. Choose the type of alarm to be set.
2. Enter the required time.
3. Press the **OK** soft key.
4. If you select **Morning Call** in Step 1, select the repeat option: **Monday to Friday** or **Monday to Saturday**.

**Remove Alarm:** deactivates all alarm settings.

**Autopower:** if this option is set to **Enable**, the alarm will ring at the specified time, even when the phone is switched off. If the menu option is set to **Disable** and the phone is switched off at the specified time, the alarm will not ring.

To stop the alarm when it rings, press the **Exit** soft key or the  key.

**Note:** You can also stop the alarm even if your phone is in the key lock mode. Your phone returns to the key lock mode after the specified period of time selected in the **Auto Key Lock** menu option (**Menu 4.2.3**).

When setting or viewing an alarm, the following options are available when you press the **Options** soft key.

**Remove Alarm:** allows you to deactivate the current alarm.

**Alarm Sound Set:** allows you to select the alarm melody.

## Calculator *(Menu 5.5)*



---

With this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.

### Using the Calculator

1. Enter the first number using the numeric keys.
2. Press the right soft key until the required arithmetic symbol appears: **+** (add), **-** (subtract), **\*** (multiply), **/** (divide).
3. Enter the second number.
4. Repeat Steps 1 to 3 as many times as required.

#### Notes:


- To erase any mistakes and clear the display, press the  key.
  - To include a decimal point or a bracket, press the left soft key until the required symbol is displayed.
5. To calculate the result, press the  key.

## Currency Exchange *(Menu 5.6)*

---

Using this menu option, you can make currency conversions.

1. Enter the current exchange rate of your source currency and press the **OK** soft key.

You can insert a decimal point by pressing the  key.

2. Enter the amount for which you wish to conduct the currency conversion and press the **OK** soft key.

The local currency amount you entered and the equivalent value in the foreign currency are displayed.

3. Press the **Exit** soft key to exit the currency convertor.

These menu functions are network services. Please contact your service provider to check their availability and subscribe to them, if you so wish.

## Call Diverting *(Menu 6.1)*

---

This network service enables incoming calls to be rerouted to the number that you specify.

Example: You may wish to divert your business calls to a colleague while you are on holiday.

Call diverting can be set up in the following ways.

**Divert Always:** all calls are diverted.

**Busy:** calls are diverted if you are already on the phone.

**No Reply:** calls are diverted if you do not answer the phone.



 
 
**Unreachable:** calls are diverted if you are not in an area covered by your service provider.

**Cancel All:** all call diverting options are cancelled.

You can specify individual diverting options for each of the following call types:


- Voice calls only
- Fax calls only
- Data calls only

To set your call diverting options, proceed as follows.

1. Select the type of call diverting required by pressing the  or  key until the appropriate option is highlighted, and then press **Select**.
2. Select the type of calls to be diverted by pressing the  or  key until the appropriate option is highlighted and then press **Select**.

The current status is displayed. If the option has already been set, the number to which the calls are diverted is displayed.

To...	Then press the...
Activate call diverting	<b>Activate</b> soft key. Go to Step 4.
Change the call number	<b>Change</b> soft key. Go to Step 4.
Deactivate call diverting	<b>Remove</b> soft key.

4. Enter the number to which the calls are to be diverted and press **OK**.  
To enter the international code, press the  key until the **+** sign is displayed.
5. If you have entered the **No Reply** option, set the length of time for which your phone rings before the call is diverted and press the **Select** soft key.

The phone sends your settings to the network and the network's acknowledgement is displayed.

You can deactivate all call diverting settings by selecting the **Cancel All** option.

## Call Barring *(Menu 6.2)*

The call barring network service allows you to restrict your calls.

Call barring can be set up in the following ways.

**All Outgoing:** calls cannot be made.

**International:** international calls cannot be made.

**International Except to Home:** when abroad, calls can be made only to numbers within the current country and to your home country, which is the country where your home network provider is located.

**All Incoming:** calls cannot be received.


 


**Incoming While Abroad:** calls cannot be received when you are using your phone outside your home service area.

**Cancel All:** all call barring settings are deactivated; calls can be made and received normally.

You can specify individual barring options for each of the following call types:

- Voice calls only
- Fax calls only
- Data calls only

To set your call barring options, proceed as follows.

1. Select the type of call barring required by pressing the  or  key until the appropriate option is highlighted and then press the **Select** soft key.
2. Select the type of calls to be barred by pressing the  or  key until the appropriate option is highlighted and then press **Select**.

3. Press the **Activate** soft key to confirm your settings.
4. Enter your call barring password supplied by your service provider.

The phone sends your settings to the network and the network's acknowledgement is displayed.

To deactivate specific call barring settings, proceed as follows.

1. Select the call barring option to be deactivated.
2. Select the type of call to which this option applies.
3. Press the **Deactivate** soft key.
4. Enter your call barring password supplied by your service provider.

The phone sends your settings to the network and the network's acknowledgement is displayed.

You can also deactivate all call barring settings by selecting the **Cancel All** option.

**Change Barring Password:** you can set and change the call barring password obtained from your service provider using this option. You must enter the current password before you can specify a new one.

Once you have entered a new password, you are asked to confirm it by entering it again.

## Call Waiting *(Menu 6.3)*

 

---

This network service enables you to be informed when someone is trying to reach you during another call.

You can specify individual call waiting options for each of the following call types:

- Voice calls only
- Fax calls only
- Data calls only

To set your call waiting options, proceed as follows.

1. Select the type of calls to which the call waiting option is to be applied by pressing the  or  key until the appropriate option is highlighted and then press **Select**.

The screen informs you whether call waiting is activated or deactivated.

2. You can activate or deactivate the call waiting feature as necessary by using the **Activate** or **Deactivate** soft key respectively.

To return to the previous screen, press the **Exit** soft key.

You can also deactivate all call waiting settings by selecting the **Cancel All** option.



## Network Selection *(Menu 6.4)*

---

The Network Selection feature enables you to indicate whether the network used when roaming (outside your home area) is selected automatically or manually.



**Note:** You can select a network other than your home network only if it has a valid roaming agreement with your home network.

To indicate whether the network is to be selected automatically or manually when roaming, proceed as follows.

1. When **Network Selection** is displayed, press the **Select** soft key.
2. Press the  or  key until the appropriate option is highlighted and then press the **OK** soft key.

If you select **Automatic**, you are connected to the first available network when roaming.

If you select **Manual**, the phone scans for the available networks. Go to Step 3.

3. Press the  or  key until the preferred network is highlighted and then press the **OK** soft key.

You are connected to that network.

## Caller ID *(Menu 6.5)*

---

You can prevent your phone number from being displayed on the phone of the person being called.

**Note:** Some networks do not allow the user to change this setting.

The following options are available.

**Default:** the default setting provided by the network is used.

**Hide Number:** your number is not displayed on the other person's phone.

**Send Number:** your number is sent each time you make a call.

## Closed User Group (CUG) *(Menu 6.6)*

---

This network service allows incoming and outgoing calls to be restricted to a selected user group. You may be a member of up to ten user groups. For details on how to create, activate and use a closed user group, contact your service provider.

**Example:** A company lends SIM cards to its employees and wants to restrict outgoing calls to members of the same team.

If you select the **Closed User Group** menu, you can enter the CUG function. You can now access the following options after pressing the **Select** soft key.

**Index List:** lets you list, add or delete CUG index numbers. The list of current CUG indexes appears.

Add a new CUG index as advised by your service provider or delete a selected group.

To...	Then press the...
Scroll through the existing CUG indexes	↶ or ↷ key.
Add a new CUG index	<b>Options</b> soft key, select the <b>Add</b> option and enter the index.
Delete a CUG index	<b>Options</b> soft key and select the <b>Delete</b> option.
Activate a CUG index	<b>Options</b> soft key and select the <b>Activate</b> option.

**Outside Access:** lets you enable or disable calls to numbers other than those nominated for the Closed User Group. This feature depends on the nature of your CUG subscription. Please check with your service provider.

**Default Group:** you may set a default CUG with your service provider. If you have done so, you can enable the **Default Group** option on your phone. When making a call, you are given the option of using your default CUG, instead of selecting one from the list.

**Deactivate:** deactivates the CUG function. This menu appears only when the default group is enabled or a CUG index is selected.

## Fun Box

The **Fun Box** menu contains several fun options.

### Games *(Menu 7.1)*

You can enjoy two games with your phone.

Scroll to the required game, using the ↶ and ↷ keys and press the **Select** soft key. For further details on the game, refer to the on-screen help.



For each game, the following options are available.

**New Game:** allows you to start a new game.

**High Score:** shows you the High Score table.

**Key Info:** shows you which keys do what within the game.

**Continue:** allows you to continue a previously saved game. This option is only available when a game has already been saved.

While you are playing a game, to...	Press the...
Pause or resume the game	 key.
Exit the game	 key.



At the end of the game, if your score is ranked fifth or higher, you can enter a name of up to ten characters.

## WAP Browser *(Menu 7.2)*

Your phone is equipped with a WAP (Wireless Application Protocol) Browser to allow you to access and navigate the Wireless Web via your phone.





### Home *(Menu 7.2.1)*




This option allows you to connect the phone to the network and load the homepage of the Wireless Web service provider.

The content of the WAP Browser startup homepage depends on your Wireless Web service provider. To scroll through the screen, use the  and  keys.

**Note:** To access the startup homepage from any other screen in the WAP Browser, use the **Home** option. For more information on the WAP Browser menus, see page 113.


### Navigating the WAP Browser

To...	Then...
Scroll through and select browser items	Press the  or  key until the  symbol points to the required item or the item is highlighted, and then press the <b>OK</b> soft key to confirm the selection.
Select a numbered item	Press the corresponding numeric key.
Return to the previous page	Press the <b>Back</b> soft key or the  key.
Return to the startup homepage	Select the <b>Home</b> menu option; for more information on this option, see page 113.

To...	Then...
Change text entry modes	Press the  key one or more times.
Enter a space	Press the  key.
Edit text	<ol style="list-style-type: none"> <li>① Set the cursor to the right of the character(s) to be corrected.</li> <li>② Press the  key as required.</li> <li>③ Enter the correct character(s).</li> </ol>

**Note:** For further details about the text entry modes, see page 42.



 

### Exiting the WAP Browser

 

 
To exit the browser at any time, simply press the  key.

### Selecting and Using Browser Menu Options

Various menu options are available when you are using the WAP Browser to navigate the Wireless Web.

To access a menu option, proceed as follows.

1. Press the  key.  
A menu is displayed.
2. Highlight the required menu option by pressing the  and  keys.
3. Select the option by pressing the  soft key.

4. If necessary, select the secondary option using the  and  keys, and press the  soft key to confirm.

**Note:** The menus may vary, depending on your version of the WAP Browser.

The following menu options are available.

**Back:** reloads the previous page in the history.

**Home:** takes you back at any time to the homepage of the Wireless Web service provider.

**Exit:** lets you exit the WAP Browser.

**Mark Site:** allows you to set a bookmark for most pages so that you can access them directly from any Web page.

**Bookmarks:** allows you to load a bookmarked Web page directly.

**Inbox:** displays all Web alerts.

**Save Image:** allows you to save the displayed image on the current page. You can see the saved image in the **Pictures** menu option (**Menu 7.3.3**).

**Reload:** reloads the current page.

**Settings:** gives you access to the following setting features.

Homepage: allows you to change the startup homepage manually.

Proxy: allows you to change the proxy server without ending the current WAP session.

Circuit Prompt: allows you to indicate whether you wish to be informed each time a WAP session is

opened. Select **ON** to display the prompt, or **OFF** not to display it.

Circuit Linger: allows you to set how long the phone waits before ending the attempt for connection when there is no answer from the network. It is preset to **60 sec**.

Scroll Mode: lets you select the scroll mode between **Block** and **Smooth**.

Scroll Speed: allows you to set the speed for scrolling to the next screen. You can select **Fast**, **Medium** or **Slow**.


Key Press Timeout: allows you to set how long the phone waits after you have pressed a key in the text entry mode before moving the cursor to the right. You can select **Fast**, **Medium** or **Slow**.

Security: displays all security-related information, such as Connection Prompt, Secure Prompt, Current Certificate and Encryption.

Advanced: displays the current URL address and restarts the browser without exiting it.

**About:** provides you with information about the version of the Mobile Browser software and the WIM (WAP Identity Module).

## **Favorite** (Menu 7.2.2)

This option allows you to store the URL addresses of your favourite Web sites. You can access this menu directly by pressing and holding down the  key while using the WAP Browser.

To store a URL address, proceed as follows.

1. Select an empty location and press the **Options** soft key.
2. Enter the address and press the **Enter** soft key.
3. Enter a name for your favourite Web site and press the **OK** soft key.


After saving your favourites, you can use the following options by pressing the **Options** soft key.

**Goto URL:** quickly accesses the site.

**Edit:** edits the selected address.

**Delete:** deletes the selected address.

## **http://** (Menu 7.2.3)


This option allows you to manually enter the URL address of the Web site that you wish to access. You can access this menu directly by pressing and holding down the  key in the WAP Browser.

For further details about the text entry modes, see page 42.

## **Settings** (Menu 7.2.4)

This option allows you to set up five proxy servers for the WAP Browser. Contact your service provider for details about the parameters to be declared.

For each server, the following parameters are available.

Parameter	Description
<b>Profile Name</b>	Name that you wish to assign to the HTTP proxy server.
<b>Homepage URL</b>	Address of your startup homepage. When the default homepage is displayed, you can delete it using the  key and enter your own choice.
<b>Security</b>	Data transmission mode. Choose <b>Secure</b> to protect your data against unauthorised access; otherwise, choose <b>Non-Secure</b> .
<b>IP Address</b>	WAP gateway address required to connect to the Internet.
<b>Bearer</b>	Bearer to be used for each type of network address accessed: <b>GPRS</b> or <b>Data</b> .

The remaining options depend on the **Bearer** setting, as indicated below.

*When the bearer is set to **Data***

Parameter	Description
<b>Login Name</b>	PPP server login ID.
<b>Password</b>	PPP server password.

Parameter	Description
<b>Dial-up Number</b>	PPP server phone number.
<b>Data Call Type</b>	<b>Analogue</b> or <b>ISDN</b> .

When the bearer is set to **GPRS**

Parameter	Description
<b>User Name</b>	User ID required to connect to the GPRS network.
<b>Password</b>	Password required to connect to the GPRS network.
<b>APN</b>	Access point name used for the address of the GPRS network gateway.

**Note:** The WAP Browser settings may vary, depending on the service provider. Contact your service provider for more information.

### Clear Cache *(Menu 7.2.5)*

You can clear the information stored in the cache (the phone's temporary memory used to store the most recently accessed Web pages).

Press the **Yes** soft key to confirm the deletion. Otherwise, press the **No** soft key.

## Downloads *(Menu 7.3)*

You can download MIDlets (Java applications running on mobile phones) from various sources using the WAP Browser and store them in your phone. You can then view the list of MIDlets stored on the Games & More screen.

**Note:** Java services may be unavailable, depending on the service provider.

### Games & More *(Menu 7.3.1)*

This menu option allows you to launch a MIDlet and access various menu options.

#### Launching a MIDlet

To launch a MIDlet, proceed as follows.

1. From the Downloads screen, select the **Games & More** option.
2. Scroll to the required MIDlet and press the **Launch** soft key.

#### Using the Menus

From the Main Screen press the **Menu** soft key to access the following options.

**Info**\*: displays information about the selected MIDlet, such as the file size, application version, vendor and the location of the jad file, which is the MIDlet description file.

**Remove**\*: removes the selected MIDlet. When the confirmation message appears, press the **Remove** soft key. To cancel your selection, press the **Cancel** soft key.

\* Shown only when a MIDlet has been downloaded.

## Entering Text

When you are prompted to enter text, the current text entry mode is indicated on the screen. For further details about the text entry modes, see page 42.

## Sounds *(Menu 7.3.2)*

In this menu, you can view the list of sounds downloaded from the server. You can set the downloaded sounds as the current ring tone, but cannot send the sounds to other phones.

When the memory is full, a warning message is displayed and the phone rejects additional sounds until you erase obsolete ones.

## Pictures *(Menu 7.3.3)*

In this menu, you can view the list of pictures downloaded from the server. You can set the downloaded pictures as the current background image, but cannot send them to other phones.

When the memory is full, a warning message is displayed and the phone rejects additional pictures until you erase obsolete ones.

## DNS Setting *(Menu 7.3.4)*

The DNS (Domain Name Server) address of the Java server is factory-set, but sometimes you may need to change it. In this menu, you can enter the required DNS address.

Before contacting the after-sales service, perform the following simple checks. They may save you the time and expense of an unnecessary service call.

## When you switch your phone on, the following messages may appear

### Insert SIM Card

- Check that the SIM card is correctly installed.

### Phone Locked Enter Password

- The automatic locking function has been enabled. You must enter the phone's password before you can use the phone.

### Enter PIN

- You are using your phone for the first time. You must enter the Personal Identification Number supplied with the SIM card.
- The PIN Check feature is enabled. Each time the phone is switched on, the PIN must be entered. To disable this feature, use the **PIN Check** menu option (**Menu 4.6.1**).


### Enter PUK

- The PIN code was entered incorrectly three times in succession and the phone is now blocked. Enter the PUK supplied by your network operator.


### **“No service”, “Network failure” or “Not done” is displayed**

- The network connection was lost. You may be in a weak signal area (in a tunnel or surrounded by buildings). Move and try again.
- You are trying to access an option for which you have not taken out a subscription with your service provider. Contact the service provider for further details.

### **You have entered a number but it was not dialled**

- Have you pressed the  key?
- Are you accessing the right cellular network?
- You may have set an outgoing call barring option.

### **Your correspondent cannot reach you**

- Is your phone switched on (the  key pressed for more than one second)?
- Are you accessing the right cellular network?
- You may have set an incoming call barring option.



 
### **Your correspondent cannot hear you speaking**

- Have you switched off the microphone?
- Are you holding the phone close enough to your mouth? The microphone is located at the bottom of the phone.

### **The phone starts beeping and “\*\*Warning\*\* Low Battery” flashes in the display**

- The battery is insufficiently charged. Replace the battery and/or recharge it.

### **The audio quality of the call is poor**

- Check the signal strength indicator in the display (); the number of bars indicates the signal strength from strong () to weak ().
- Try moving the phone slightly or moving closer to a window if you are in a building.

### **No number is dialled when you recall a phonebook entry**

- Check that the number has been stored correctly, by using the Phonebook Search feature.
- Re-store the number, if necessary.

If the above guidelines do not help you to solve the problem, take a note of:

- The model and serial numbers of your phone
- Your warranty details
- A clear description of the problem

Then contact your local dealer or Samsung after-sales service.

## Access Codes

There are several access codes that are used by your phone and its SIM card. These codes help you protect the phone against unauthorised use.

When requested for any of the codes explained below, key in the appropriate code (displayed as asterisks) and press the **OK** soft key. If you make a mistake, press the **⌫** key one or more times until the incorrect digit is cleared and then continue entering the correct code.

The access codes, except for the PUK and PUK2 codes can be changed using the **Security** menu options (**Menu 4.6**). See page 86 for further details.

**Important!** Avoid using access codes resembling emergency numbers, such as 112, so that you do not dial an emergency number accidentally.

### Phone Password

The Phone Lock feature uses the phone password to protect your phone against unauthorised use. The phone password is supplied with the phone and is factory set to 00000000.

To...	Refer to...
Activate/deactivate the Phone Lock feature	Page 87 <b>(Menu 4.6.3)</b> .
Change the phone password	Page 88 <b>(Menu 4.6.4)</b> .

### PIN

The Personal Identification Number or PIN (4 to 8 digits) protects your SIM card against unauthorised use. It is usually supplied with the SIM card.

If you enter an incorrect PIN three times in succession, the code is disabled and cannot be used until you re-enable it by entering the PUK (see below).

To...	Refer to...
Activate/deactivate the PIN Check feature	Page 87 <b>(Menu 4.6.1)</b> .
Change the PIN	Page 87 <b>(Menu 4.6.2)</b> .

### PUK

The 8-digit PUK (**PIN Unblocking Key**) is required to change a disabled PIN. The PUK may be supplied with the SIM card. If not, or you have lost it, contact your service provider.

To re-enable your PIN, proceed as follows.

1. Key in the PUK and press the **OK** soft key.
2. Enter a new PIN of your choice and press the **OK** soft key.
3. When the **Confirm New PIN** message is displayed, key in the same code again and press the **OK** soft key.

If you enter an incorrect PUK ten times in succession, the SIM card becomes invalid. Contact your service provider for a new card.

## PIN2

---

The PIN2 (4 to 8 digits), supplied with some SIM cards, is required to access specific functions, such as setting the maximum cost of a call. These functions are available if supported by your SIM card.

If you enter an incorrect PIN2 three times in succession, the code is disabled and you cannot access the functions until you re-enable it by entering the PUK2.

To change the PIN2, refer to page 89 (**Menu 4.6.7**).

## PUK2

---

The 8-digit PUK2 (**PIN Unblocking Key 2**), supplied with some SIM cards, is required to change a disabled PIN2. If you lose the code, contact your service provider.

To re-enable your PIN2, proceed as follows.

1. Key in the PUK2 and press the **OK** soft key.
2. Enter a new PIN2 of your choice and press the **OK** soft key.
3. When the **Confirm PIN2** message is displayed, key in the same code again and press the **OK** soft key.

If you enter an incorrect PUK2 ten times in succession, you will not be able to access the functions requiring the PIN2. Contact your service provider for a new card.

## Barring Password

---

The 4-digit barring password is required when you use the Call Barring function. You obtain the password from your service provider when you subscribe to this function. You can change this password in the **Call Barring** menu option (**Menu 6.2**). See page 106 for further details.

# Health and Safety Information

## Exposure to Radio-Frequency Energy (SAR Information)

---

This phone meets European Union (EU) requirements concerning exposure to radio waves.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured, so as not to exceed the limits for exposure to radio-frequency (RF) energy, as recommended by the EU Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as SAR (Specific Absorption Rate). The SAR limit recommended by the EU Council is 2.0 W/kg.\*

SAR tests are conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

Before a new model phone is available for sale to the public, compliance with the European R&TTE Directive must be shown. This directive includes as one of its essential requirements the protection of the health and safety of the user and any other person.

---

\* The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. The SAR values may vary depending on national reporting requirements and the network band.

## Precautions When Using Batteries

---

Your phone is powered by a rechargeable Li-ion standard battery.

- Never use any charger or battery that is damaged in any way.
  - Use the battery only for its intended purpose.
  - If you use the phone near the network's base station, it uses less power; talk and standby times are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
  - Battery charging times depend on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
  - If left unused, a fully charged battery will discharge itself over time.
  - Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
  - Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and life-time of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).
  - Do not short-circuit the battery. Accidental short circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the back of the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuit.
  - Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

## Road Safety

---

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips.

1. Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands-free device. If possible, add an extra layer of convenience and safety to your wireless phone with one of the many hands-free accessories available today.
3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.
4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
5. Do not take notes or look up phone numbers while driving. Jotting down a To Do List or flipping through your phonebook takes your attention away from your primary responsibility, driving safely.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Make the people with whom you are talking aware that you are driving and suspend conversations that have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Dial the emergency number in the case of fire, traffic accident or medical emergencies. Remember, it is a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. If you see a car accident, crime in progress or other serious emergency where lives are in danger, call the emergency number, as you would want others to do for you.
10. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or any other special non-emergency wireless number.

## Operating Environment

---

Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

## Electronic Devices

---

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

### Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on
- Should not carry the phone in a breast pocket
- Should use the ear opposite the pacemaker to minimise potential interference

If you have any reason to suspect that interference is taking place, switch off your phone immediately.

### Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

### Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

## Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle.

## Posted Facilities

Switch off your phone in any facility where posted notices require you to do so.

## Potentially Explosive Atmospheres

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone while at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.


Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

## Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember that to make or receive any calls, the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call, proceed as follows.

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 112 or any other official emergency number). Emergency numbers vary by location.
3. Press the  key.

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

## Other Important Safety Information

---

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch off your phone before boarding an aircraft. The use of wireless phones in aircraft may be dangerous to the operation of the aircraft, and is illegal.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

## Care and Maintenance

---

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not touch the phone with wet hands while it is charging. Doing so may give you an electric shock or damage the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.

- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

## Glossary

To help you understand the main technical terms and abbreviations used in this booklet and take full advantage of the features on your mobile phone, here are a few definitions.

### **Call Barring**

Ability to restrict outgoing and incoming calls.

### **Call Diverting**

Ability to reroute calls to another number.

### **Call Holding**

Ability to put one call on standby while answering or making another call; you can then switch between the two calls, as required.

### **Call Waiting**

Ability to inform users that they have an incoming call when engaged on another call.

### **Dual Band**

Ability to operate with both DCS (1800 MHz) and GSM (900 MHz) networks. The phone automatically uses the network with strongest signal and even switches networks during a call within the same operator's network.

### **GPRS (General Packet Radio Service)**

New non-voice value-added service that allows information to be sent and received across a mobile telephone network. GPRS guarantees continuous connection to the Internet for mobile phone and computer users. It is based on the Global System for Mobile Communication (GSM), circuit-switched cellular phone connections and the Short Message Service (SMS).

**GSM (Global System for Mobile Communication)**

International standard for cellular communication, guaranteeing compatibility between the various network operators. GSM covers most European countries and many other parts of the world.

**Java**

Programming language generating applications that can run on all hardware platforms, whether small, medium or large, without modification. It has been promoted for and geared heavily to the Web, both for public Web sites and Intranets. When a Java program runs from a Web page, it is called a *Java applet*. When it is run on a mobile phone or pager, it is called a *MIDlet*.

**Line Identification Services (Caller ID)**

Services allowing subscribers to view or block the telephone numbers of callers.

**Multiparty Calling**

Ability to establish a conference call involving up to five additional parties.

**Phone Password**

Security code used to unlock the phone when you have selected the option to lock it automatically each time it switches on.

**PIN (Personal Identification Number)**

Security code that protects the phone/SIM against unauthorised use. The PIN is supplied by the service provider with the SIM card. It may be a four to eight-digit number and can be changed, as required.

**PUK (PIN Unblocking Key)**

Security code used to unlock the phone when an incorrect PIN has been entered three times in succession. The eight-digit number is supplied by the service provider with the SIM card.

**Roaming**

Use of your phone when you are outside your home area (when travelling for example).

**SDN (Service Dialling Numbers)**

Telephone numbers supplied by your network provider and giving access to special services, such as voice mail, directory inquiries, customer support and emergency services.



**SIM (Subscriber Identification Module)**

Card containing a chip with all the information required to operate the phone (network and memory information, as well as the subscriber's personal data). The SIM card fits into a small slot on the back of the phone and is protected by the battery.

### **SMS (Short Message Service)**

Network service sending and receiving messages to and from another subscriber without having to speak to the correspondent. The message created or received can be displayed, received, edited or sent.

### **Soft Keys**

Two keys marked  and  on the phone, the purpose of which:

- Varies according to the function that you are currently using
- Is indicated on the bottom line of the display just above the corresponding key

### **Voice Mail**

Computerised answering service that automatically answers your calls when you are not available, plays a greeting (optionally in your own voice) and records a message.

## A

- Access codes 124
- Accessories 9
- Alarm (5.4) 100
- Alert Type (3.3) 79
- Animations 66, 70
- Answering
  - a call 25
  - a second call 52
- Anykey Answer 91
- Auto Key Lock (4.2.3) 85
- Auto Redial 91
- Autopower 100

## B

- Background image 84
- Backlight 15, 90
  - brightness 90
- Barring
  - calls (6.2) 105
  - password 106, 127
- Battery
  - charging 18
  - low battery indicator 19
  - precautions 130
- Brightness (4.7.1) 90
- Broadcast (1.10) 72
- Browser
  - WAP (7.2) 112

## C

- Calculator (5.5) 101
- Calendar (5.1) 93
- Caller
  - groups 35, 36, 37
  - ID (6.5) 109
- Calls
  - answering
    - a call 25
    - a second call 52
  - barring (6.2) 105
  - cost (2.6) 76

- dialled (2.3) 75
  - diverting (6.1) 103
  - emergency 137
  - ending 23
  - holding 48
  - international 22
  - making 22
  - missed (2.1) 26, 74
  - multiparty 52
  - received (2.2) 74
  - records (2) 74
  - redialling 23
    - automatically 91
  - rejecting 25
  - speed-dialling 38
  - time (2.5) 76
  - via phonebook 35
  - waiting (6.3) 107
- Card
  - installing the SIM 16
- Care 139
- Changing
  - barring password 106
  - password (4.6.4) 88
  - PIN (4.6.2) 87
  - PIN2 (4.6.7) 89
  - text entry modes 43
- Characters
  - changing mode 43
  - entering 42
- Charging batteries 18
- Closed User Group (6.6) 109
- Conference call 52
- Connect
  - to voice server 71
  - tone 82
- Copying
  - memos 95
  - phonebook numbers 34
  - tasks 98
- Correcting numbers 22
- Cost of calls (2.6) 76
- CUG 109
- Currency Exchange (5.6) 102

**D**

- Date setting (5.3.2) 99
- Deleting
  - call records 27, 75
  - memos 93, 95
  - messages 63, 64, 69
  - missed calls 27, 74
  - phonebook
    - numbers 34, 40
    - tasks 98
- Dialled calls (2.3) 75
- Display 13
  - brightness 90
  - icons 14
  - language (4.5) 86
  - settings (4.7) 90
- Diverting calls (6.1) 103
- Downloads (7.3) 119
- DTMF tones
  - sending 50

**E**

- Earpiece volume 24
- Editing
  - caller groups 37
  - memos 95
  - messages 62
  - missed calls 27, 74
  - phonebook
    - numbers 34
    - tasks 97
- Electronic devices 134
- Emergency calls 137
- Error tone 82
- Explosive atmospheres 136
- Extra Settings (4.8) 91
- Extra Tones (3.7) 82

**F**

- FDN mode (4.6.6) 89
- Fixed Dial Number mode 89
- Fun Box (7) 111
- Functions
  - selecting 29

**G**

- Games (7.1) 111
- Graphic Logo (4.7.4) 91
- Greeting Message (4.3) 85
- Groups
  - caller 35, 36, 37
  - user 109

**H**

- Health information 128
- Hearing aids 135
- Holding calls 48

**I**

- Icons 14
- Identifying callers 35, 36, 37, 109
- Images
  - background 84
  - messages 66, 70
- Inbox (1.1) 62
- Incoming text messages 62
- Infrared Activate (4.1) 83
- Internet 112
- IrDA port 83

**K**

- Key tones
  - adjusting volume 24
  - muting 50
  - selecting (3.4) 79
  - sending 50
- Keypad Tone (3.4) 79
- Keys
  - auto lock 85
  - description 11
  - location 10
  - locking 21, 85
  - shortcut 92
  - soft 29

**L**

- Language (4.5) 86
  - Last number redial 23
  - Length of calls 76, 82
  - Letters
    - changing mode 43
    - entering 42
  - Light
    - backlight 15, 90
    - service 15, 90
  - Locking
    - keys 21, 85
    - phone (4.6.3) 87
    - SIM card (4.6.5) 88
  - Logo
    - graphic (4.7.4) 91
  - Low battery indicator 19
  - Lower-case characters
    - entering 46
- 
- Maintenance 139
  - Medical devices 135
  - Melodies 66, 70, 78
  - Memory status
    - message (1.8) 71
    - phonebook 41
  - Memos
    - copying 95
    - deleting 93, 95
    - editing 95
    - writing 94
  - Menus
    - list 56
    - scrolling 55
    - shortcuts 56
    - style 84
  - Messages 62
    - broadcast (1.10) 72
    - deleting (1.6) 69
    - greeting (4.3) 85
    - inbox (1.1) 62
    - memory status (1.8) 71
    - objects 70
    - outbox (1.2) 63
    - settings (1.5) 68
    - templates (1.4) 67

- tone (3.5) 80
- voice mail (1.9) 71
- write new (1.3) 65
- Microphone mute 49
- Minute Minder 82
- Missed Calls (2.1) 26, 74
- Morning Call 100
- Multiparty calls
  - dropping 54
  - making 52
  - private conversation 53
- Muting
  - key tones 50
  - microphone 49
- My Objects (1.7) 70
- My Settings (4.2) 84

**N**

- Names
  - entering 42
  - searching/dialling 35
  - storing 31
- Network Selection (6.4) 108
- Network Services (6) 103
- Numbers
  - adding phonebook 35
  - copying
    - phonebook 34
  - correcting 22
  - deleting 34
  - editing phonebook 34
  - fixed dial 89
  - mode 47
  - own 86
  - pasting phonebook 34
  - redialling 23
  - searching/dialling 35
  - storing 31
  - voice server 71

**O**

- Objects
  - message 66, 70
- Operator logo 91
- Options
  - selecting 29

Organiser (5) 93  
 Outbox (1.2) 63  
 Outgoing text messages 63  
 Own Number (4.4) 86

**P**

Pacemakers 134  
 Password  
   barring 127  
   changing 106  
   phone 124  
   changing 88  
 Pasting phonebook numbers 34  
 Phone  
   lock (4.6.3) 87  
   password 124  
   settings (4) 83  
 Phonebook 31  
   adding entries 35  
   caller groups 35, 36, 37  
   copying 34  
   deleting 34, 40  
   editing 34  
   memory status 41  
   options 34  
   pasting 34  
   searching/dialling 35  
   speed-dialling 38  
   storing numbers/names 31  
 Pictures  
   background 84  
   downloading 120  
   messages 66, 70  
 PIN 125  
   changing 87  
   checking 87  
 PIN2 126  
   changing 89  
 Power On/Off (3.6) 81  
 Problem solving 121  
 PUK 125  
 PUK2 126

**R**

Radio-frequencies 128  
 Reading text messages 62  
 Received Calls (2.2) 74  
 Redialling  
   automatically 91  
   last number 23  
 Rejecting calls 25  
 Reset Settings (4.10) 92  
 Ring  
   tone (3.1) 78  
   type (3.3) 79  
   volume (3.2) 78  
 Road safety 132  
 Roaming 108

**S**

Safety  
   batteries 130  
   explosive atmospheres 136  
   information 128, 138  
   operating environment 134  
   precautions 7  
   road 132  
 Schedule 93  
 Searching in phonebook 35  
 Security (4.6) 86  
 Selecting functions/options 29  
 Sending  
   DTMF tones 50  
   key tones 50  
   messages 65  
 Service light 15, 90  
 Settings (1.5) 68  
   alarm (5.4) 100  
   colours 90  
   date (5.3.2) 99  
   display (4.7) 90  
   extra (4.8) 91  
   language (4.5) 86  
   phone (4) 83  
   reset (4.10) 92  
   security (4.6) 86

  sound (3) 78  
   time (5.3.1) 99  
 Shortcut (4.9) 92  
 Silent mode 28  
 SIM card  
   installing 16  
   locking 88  
 SMS  
   message icon 62  
   setup 68  
   using 51, 62  
 Soft keys 29  
 Solving problems 121  
 Sound Settings (3) 78  
 Sounds  
   downloading 120  
   messages 66  
 Speed-dialling 38  
 Switching on/off  
   microphone 49  
   phone 20  
   silent mode 28  
   tone 81  
 Symbol mode 47

**T**

T9 mode 44  
 Tasks  
   defining 96  
   editing 97  
 Templates (1.4) 67  
 Text  
   changing mode 43  
   entering 42  
 Time  
   call (2.5) 76  
   format (5.3.4) 99  
   setting (5.3.1) 99  
   world (5.3.3) 99  
 Time & Date (5.3) 99  
 To Do List (5.2) 96  
 Tone  
   connect 82  
   error 82  
   extra (3.7) 82  
   keypad (3.4) 79  
   message (3.5) 80  
   minute minder 82  
   power on/off (3.6) 81

  ring (3.1) 78  
 Travel adapter 18

**U**

Unlocking keypad 21, 85  
 Upper-case characters  
   entering 46  
 User groups 109

**V**

Vibration 28, 79  
 Voice Mail (1.9) 71  
 Voice server 71  
 Volume  
   adjusting 24  
   selecting the ring 78

**W**

Waiting  
   calls 52, 107  
 Wallpaper 84  
 WAP Browser (7.2) 112  
 World Time (5.3.3) 99  
 Write New (1.3) 65  
 Writing  
   memos 94  
   text messages 65



## Dual Band SGH-C100 GPRS Telephone Quick Reference Card

- Access the Menu Functions
- 1 Press the **Menu** soft key.
  - 2 Scroll with the **←** and **→** keys through the list of the menus until you reach the required menu.
  - 3 Press the **Select** soft key.
  - 4 Scroll with the **←** and **→** keys through the list of the options until the required one is selected.
  - 5 Press the **Select** soft key.

- Each of the two soft keys (**☐** and **☐**) perform the function indicated by the text above it on the bottom line of the display.

Switch On/Off  
Press and hold the **☐** key.

Make a Call  
① Enter the number.  
② Press the **☐** key.

End a Call  
Briefly press the **☐** key.

View Missed Calls Immediately After Missing Them  
① Press the **View** soft key.  
② Scroll with the **←** and **→** keys through the missed calls.  
③ To return the call, press the **☐** key.



## Declaration of Conformity (R&TTE)

### For the following product :

DUAL BAND GSM TELEPHONE

(Product Name)

SGH-C100

(Model Number)

### Manufactured at :

- Samsung Electronics, 94-1 Imsu-Dong, Gumi City, Kyung Buk, Korea, 730-350

(factory name, address)

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

<b>Safety</b>	: EN 60950:2000
<b>EMC</b>	: EN 301 489-01 v1.2.1 (07-2000)
	: EN 301 489-07 v1.1.1 (09-2000)
<b>SAR</b>	: EN 50360
<b>Network</b>	: EN 301 511 V7.0.1(12-2000)

We hereby declare the [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex<sup>[IV]</sup> of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Claremont House, 34 Molesey Road, Walton-on-Thames, KT12 4RQ, UK  
Identification mark: 168

The technical documentation kept at:

Samsung Electronics Euro QA Lab.

which will be made available upon request.

(Representative in the EU)

Samsung Electronics Euro QA Lab,  
Blackbushe Business Park, Saxony Way,  
Yateley, Hampshire, GU46 6GG, UK  
2003. 03. 13



In-Seop Lee / S. Manager

(place and date of issue)

(name and signature of authorised person)

\* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.

Answer a Call	Press the <b>↵</b> key.	Store Numbers in Phonebook	
Adjust the Volume	Press the <b>▲</b> or <b>▼</b> key on the left side of the phone.	Search for a Number in Phonebook	
Choose the Alert Type	<ol style="list-style-type: none"> <li>Select the <b>Alert Type</b> menu option (<b>Menu 3.3</b>).</li> <li>Select an option: <ul style="list-style-type: none"> <li>• <b>Light Only</b></li> <li>• <b>Melody</b></li> <li>• <b>Vibration</b></li> <li>• <b>Vibra+Melody</b></li> </ul> </li> <li>Press the <b>Select</b> soft key.</li> </ol>		
Store Numbers in Phonebook	<ol style="list-style-type: none"> <li>Enter the number.</li> <li>Press the <b>Save</b> soft key.</li> <li>Select an icon for label.</li> <li>Press the <b>Select</b> soft key.</li> </ol>		<ol style="list-style-type: none"> <li>Press the <b>Name</b> soft key.</li> <li>Select the <b>Search</b> option.</li> <li>Enter the start of the name.</li> <li>To scroll through the names, press the <b>←</b> and <b>→</b> keys.</li> <li>Press the <b>View</b> soft key.</li> <li>To scroll through the numbers, press the <b>←</b> and <b>→</b> keys.</li> <li>Press the <b>↵</b> key to dial.</li> </ol>